Lutron®

integration protocol

revision Q **21 April 2015**

LUTRON®

Updates new to this release of the Lutron® Integration Protocol

Revision Update: **Q**

HVAC Controller

- New models added: LR-HVAC-230-S, LR-HVAC-PLC1-CPN7120, MWP-T-OHW-WH-A . . . 132

Revisions to previous releases of the Lutron® Integration Protocol

Revision Update: **P**

Pico® Wireless Control

- Current models added: PJ2-2B, PJ2-2BRL, PJ2-3B, PJ2-3BRL, PJ2-4B; Graphic added: 4B . . . 108
- Compatibility table . . . 108
  - Models added: Pico® models (PJ2-)
  - Models added to note 2 reference: Pico® models PJ-, Pico® models PJ2-
  - "In QS Standalone systems…" note added (note 1)
  - "All models supported except…" note added (note 3)
- DEVICE Commands (Component Numbers) . . . 109
  - Table section subhead added: "For all Legacy models and all Current models *except*…"
  - Table section added: "For PJ2-4B *only*"
  - Table Components added: Buttons 1–4 (#8, #9, #10, #11)
- Example DEVICE Commands . . . 109
  - Operation Execute: Press Button 1 modified: "(on a non-4B model)"

HVAC Controller

- HVAC Commands (Action Numbers and Parameters) . . . 133, 134
  - Parameters modified: Temperature: "32–212 °F" (#1); Heat Setpoint: "32–212 °F", Cool Setpoint "32–212 °F" (#2); Mode 1: "Protect" added (#3); "0–100 °C" (#15); "with Eco Offset applied" added, Heat Setpoint: "0–100 °C", Cool Setpoint "0–100 °C" (#16)
  - Parameters added: Mode 7 = Fan, Mode 8 = Dry (#3); Mode 3 = Cycler, Mode 4 = No, Mode 5 = High, Mode 6 = Medium, Mode 7 = Low, Mode 8 = Top (#4); 8 = Off, 9 = Emergency Heat, 10 = Dry (#14);
  - Action added: Set or Get Heat and Cool Setpoints (#17)

QS Sensor Module

- DEVICE Commands (Component Numbers) . . . 142
  - Components modified: Model PJ2-4B added to Pico® 1–10 Buttons (note reference 2)
  - Note 2 added: Model PJ2-4B button order and component mapping

Continued on next page…

Revisions to previous releases of the Lutron® Integration Protocol

Revision Update: **O**

Integrator's Reference

- Compatibility Matrix (Device Compatibility Matrix). 10
  - – Devices added: Energi Savr Node™ QS/Softswitch®, Energi Savr Node™ QS/International Softswitch®, Energi Savr Node™ QS/Phase Adaptive, QS Input/Output Interface (QSE-IO), QS Sensor Module (QSM)
- DEVICE: Command Summary (Action Numbers and Parameters) 11, 12
  - – Actions added: Enable (#1); Disable (#2); QSG Timeclock State (#34); Query CCI State (#35)
  - – "Not supported by Quantum" note added to actions (#14–20)
- MONITORING: Command Summary (Monitoring Type). 16
  - – Monitoring Types added: Occupancy (#6); System Variable (#10); Venetian Tilt (#14); Shade Group (#23); Partition Wall (#24)
  - – "Not supported in QS Standalone" note added to monitoring types: LED (#4); Sequence (#16); HVAC (#17); Mode (#18)
- HELP: Command Summary 18
  - – "Not supported in QS Standalone" note added

QS Standalone

- System Overview (QS System Device Compatibility Index) 20
  - – Devices added: Energi Savr Node™ QS International Motor Module, QS Input/Output Interface (QSE-IO), QS Sensor Module (QSM), QS Wall Control Interface
- Supported Commands (formerly "Additional Commands") 21
  - – Command description added: OUTPUT
- ETHERNET Commands (Configuration Numbers) 23
  - – Descriptions modified: Get/Set (#0–3)
  - – Parameter modified: Login Info (#3)
- RESET Commands (Action Numbers) 26
  - – Action added: Restore to Factory Defaults (#2)
- PROGRAMMING Commands (Action Numbers and Parameters) 27
  - – Action added: Add Scene programming to a phantom button (#2)
  - – Parameters modified: a), b): "Shade" removed (#1)
  - – Parameters added: d): "Fade", e): "Delay" (#1)
- DEVICE Commands (Action Numbers and Parameters) 30
  - – Command descriptions modified: Lighting zones added (#14); Venetians removed (#18–20)

RadioRA® 2

- TIMECLOCK Commands (Action Numbers and Parameters). 37
  - – Action added: Enable/Disable Event (#6)

Quantum®

- AREA Commands (Action Numbers and Parameters) 51
  - – Actions added: Get or Set Hyperion™ Shadow Sensor Override State (#26); Get or Set Hyperion™ Brightness Sensor Override State (#27)
  - – Parameters added: 1=unknown, 2=inactive (#8)
  - – "Scene 17 to 32 available only on slider" note added (#6)

Continued on next page…

Revisions to previous releases of the Lutron® Integration Protocol

Revision Update: **O** (continued)

HomeWorks® QS

- TIMECLOCK Commands (Action Numbers and Parameters) 65
  - – Action added: Enable/Disable Event (#6)

GRAFIK Eye® QS

- DEVICE Commands (Component Numbers) 72, 73
  - – Components added: Local CCI (#163); Timeclock Controller (#166), Wireless Occupancy Sensor 1–30 (#500–529); EcoSystem® Ballast Occupancy Sensor 1–64 (#700–763)
  - – "Not supported in QS Standalone" note added (#201, #210, #219, #228, #237, #174, #175, #211, #183, #184, #220, #192, #193, #229)
- DEVICE Commands (Action Numbers and Parameters) 73
  - – Actions added: Scene Save (#12); Get/Set Timeclock State (#34)
  - – Actions modified: Press/Occupied (#3); Release/Unoccupied (#4); Get/Set Light Level (#14)
  - – Parameter modified: QS Standalone fade/delay (#14)
- OUTPUT Commands (Action Numbers and Parameters) 74
  - – Parameter modified: QS Standalone fade/delay (#1)

Energi Savr Node™ QS for DALI®

- DEVICE Commands (Component Numbers) 76
  - – Component added: Occupancy Sensors 1–4 (#151–154)
  - – Component numbers changed: #301–332 (formerly #201–232)
- DEVICE Commands (Action Numbers and Parameters) 76
  - – Actions added: Report Occupied (#3); Report Unoccupied (#4); Scene Save (#12)
  - – Parameter modified: QS Standalone fade/delay (#14)
- OUTPUT Commands (Action Numbers and Parameters) 77
  - – Parameter modified: QS Standalone fade/delay (#1)

Energi Savr Node™ QS with EcoSystem®

- DEVICE Commands (Component Numbers) 79
  - – Components added: Occupancy Sensors 1–4 (#136–139); Loop 1 Ballast Occupancy Sensors (#140–203); Loop 2 Ballast Occupancy Sensors (#204–267)
- DEVICE Commands (Action Numbers and Parameters) 79
  - – Actions added: Report Occupied (#3); Report Unoccupied (#4); Scene Save (#12)
- OUTPUT Commands (Action Numbers and Parameters) 80
  - – Parameter modified: QS Standalone fade/delay (#1)

Energi Savr Node™ QS for 0–10V/Softswitch®/Phase Adaptive

- Phase Adaptive models added 82
- DEVICE Commands (Component Numbers) 82
  - – Components added: Occupancy Sensors 1–4 (#34–37); Occupancy Sensors 1–2 (#34–35)
- DEVICE Commands (Action Numbers and Parameters) 82
  - – Actions added: Report Occupied (#3); Report Unoccupied (#4); Scene Save (#12)
- OUTPUT Commands (Action Numbers and Parameters) 83
  - – Parameter modified: QS Standalone fade/delay (#1)

Continued on next page…

Revisions to previous releases of the Lutron® Integration Protocol

Revision Update: **O** (continued)

Energi Savr Node™ QS for Motor Module (International)

- DEVICE Commands (Component Numbers) . . . 85
  – Component added: Zones 1–4 (#1–4)
- DEVICE Commands (Action Numbers and Parameters) . . . 85
  – Actions added: Set Light Level (#14); Raise (#18); Lower (#19); Stop (#20)
- OUTPUT Commands (Action Numbers and Parameters) . . . 86
  – Actions added: Set/Get Zone Level (#1); Report Travel Time Remaining (#17)

Architrave™ Keypad

- DEVICE Commands (Component Numbers) . . . 90
  – "Available only on units in a Quantum® or HomeWorks® system" note removed (#26)
  – "Available only on units in a Quantum® or HomeWorks® system" note added (#82–87)
- DEVICE Commands (Action Numbers and Parameters) . . . 91
  – Actions modified: Press/CCI Close (#3); Release/CCI Open (#4)
  – "Available only on units in a Quantum® or HomeWorks® system" note removed (#5)

seeTouch® Keypad

- DEVICE Commands (Action Numbers and Parameters) . . . 97
  – Actions modified: Press/CCI Close (#3); Release/CCI Open (#4)
  – "Available only on units in a Quantum® or HomeWorks® system" note removed (#5, #6)
  – "Available only on units in a Quantum® or HomeWorks® system" note added (#9)

seeTouch® Keypad (International)

- DEVICE Commands (Component Numbers) . . . 99
  – "Not supported in QS Standalone" note added (#81–90)
- DEVICE Commands (Action Numbers and Parameters) . . . 100
  – Actions modified: Press/CCI Close (#3); Release/CCI Open (#4)
  – "Not supported in QS Standalone" note added (#32)

Wallbox Input Closure Interface

- DEVICE Commands (Component Numbers) . . . 113
  – Components added: Button 8 (#8); LED 8 (#88)

QSE-IO

– New product section added . . . 137

QS Sensor Module

– New product section added . . . 141

Revisions to previous releases of the Lutron® Integration Protocol

Revision Update: **N**

- Integrator's Reference
  – DEVICE Command . . . 9, 10
  – OUTPUT Command . . . 12, 13
  – MONITORING Command . . . 15
  – SYSTEM Command . . . 18
- Quantum® System Commands . . . 50, 53
- GRAFIK Eye® QS . . . 70, 71
- Pico® wireless controls . . . 107

Table of Contents

About Integration
Integration Operations 7
Operation Characters 7
Command Types 7
Command Structure 7
Command Termination 7
Command Examples 8
Integration Access Points 9
Command Rules and Formatting 9

Integrator's Reference
Compatibility Matrix 10
Device Command Summary 11
Output Command Summary 14
Group Command Summary 15
Monitoring Command Summary 16
Error Command Summary 17
Help Command Summary 18
System Command Summary 19

QS Standalone
System Overview 20
Integration Access Points 21
System Commands 23

RadioRA® 2
System Overview 31
Integration Access Points 32
System Commands 34

Clear Connect® Gateway System
System Overview 38
Integration Access Points 39
System Commands 42

Quantum®
System Overview 44
Integration Access Points 46
System Commands 48

HomeWorks® QS
System Overview 57
Integration Access Points 59
System Commands 61

Devices
GRAFIK Eye® QS 71
Energi Savr Node™ QS/DALI® 75
Energi Savr Node™ QS/EcoSystem® 78
Energi Savr Node™ QS/EcoSystem® (Int'l) 78
Energi Savr Node™ QS/0–10 V/Softswitch® (Int'l) . 81
Energi Savr Node™ QS/Phase Adaptive (Int'l) . . . 81
Energi Savr Node™ QS/0–10 V/Softswitch® . . . 81
Energi Savr Node™ QS/Motor Module (Int'l) . . . 84
Remote Power Module 87
Architrave™ Keypad 89
Signature Series™ Keypad 92
seeTouch® Keypad 95
seeTouch® QS International Keypad 98
Tabletop seeTouch® Keypad 101
Hybrid Keypad 104
Pico® Wireless Control 108
Dynamic Keypad 110
Wallbox Input Closure Interface 112
Sivoia® QS Shade 115
Sivoia® QS Venetian Blind 118
Maestro® Dimmer and Plug-In Module 121
Maestro® Fan Speed Control 124
Visor Control Receiver 126
Radio Powr Savr™ Sensor 130
HVAC Controller 132
Wireless Temperature Sensor 135
QSE-IO Control Interface 137
QS Sensor Module (QSM) 141

LUTRON®

About Integration

Integration Operations

The Lutron® integration protocol will allow third-party equipment, such as touch-screens, universal remote controls and software applications, to control and monitor devices in a Lutron® lighting control system.

The protocol supports three basic types of integration operations:

- Execute an action in the Lutron® system
- Query the status of the Lutron® system and Lutron® devices
- Monitor responses from the Lutron® system

Operation Characters

To help create and manage the different integration operations, three distinct operation characters have been selected to begin each command. All protocol messages will start with one of the following operation characters:

- # Execute an action (e.g., turn a dimmer on/off)
- ? Query system information (e.g., determine on/off status of a dimmer)
- ~ Monitor responses from the system when requested or after a change has occurred (e.g., if someone turns on a dimmer locally, a response command is sent out to indicate the change)

Note to Integrator: *Operation characters are not used in any other location in the protocol command string. Therefore, the driver can search for these characters to determine the start of a new command string.*

Command Types

Operation characters will be followed by command types. The two most common commands are: OUTPUT and DEVICE. Other command types are available; see the Integrator's Reference for a summary.

- OUTPUT allows control and monitoring of device outputs such as dimmers and contact closure outputs.
- DEVICE allows control and monitoring of device inputs such as button presses, releases, and contact closure inputs.

Command Structure

The protocol command structure is made up of three parts:

Command	Integration ID	Command-specific fields

1. The **Command** is made up of the operation character and the command type.
2. The **Integration ID** is assigned to each device in the system during system setup, providing a unique user-assigned address for each system device.
3. The **Command-specific fields** contain additional information relevant to the type of command. Details about what command-specific field data is supported can be found in the appropriate device specific section of this integration protocol guide.

Command Termination

Each command is made up of fields, separated by commas and terminated with a carriage return (ASCII dec 13/hex 0D) and a line feed (ASCII dec 10/hex 0A). Throughout this document, carriage return is shown as **<CR>** and line feed is shown as **<LF>**.

About Integration *(continued)*
Command Examples

1) This command sets a dimmer (1) level to 75% with a 1 minute and 30 second fade time.
***#OUTPUT,1,1,75,01:30*<CR><LF>**

Command	Integration ID	Command-specific fields		
		Action Number	Level	Fade Time
#OUTPUT	1	1	75	01:30

2) This command presses button number 1 of a keypad (2).
***#DEVICE,2,4,3*<CR><LF>**

Command	Integration ID	Command-specific fields	
		Component Number	Action Number
#DEVICE	2	4	3

3) This command requests the output level for a dimmer (3).
***?OUTPUT,3,1*<CR><LF>**

Command	Integration ID	Command-specific fields
		Action
?OUTPUT	3	1

4) When a user makes a change to a dimmer locally, the following command response would be sent out from the system or when requested by the command in Example 3 above. This command response example shows the local dimmer (3) level was changed to 90%.
***~OUTPUT,3,1,90.00*<CR><LF>**

Command	Integration ID	Command-specific fields	
		Action	Level
~OUTPUT	3	1	90.00

About Integration *(continued)*

Integration Access Points

- Integration Access Points communicate with external systems using RS232, Ethernet or both. The Lutron® integration protocol will allow third-party equipment, such as touch-screens, keypads and software applications, to control and monitor devices in the Lutron® lighting control system through an Integration Access Point. For more information, check the page specific to the Integration Access Point being used. An example of an Integration Access Point is the QS Network Interface (QSE-CI-NWK-E). For a listing of all the available Integration Access Points supported by a particular system, see the Integration Access Points section for that system in the table of contents.

Command Rules and Formatting

- All commands are in ASCII characters
- Each command is made up of fields, separated by commas and terminated with a carriage return (<CR>, ASCII 13) and a new line (<LF>, ASCII 10)
- Letter case is ignored
- Spaces are ignored
- Leading zeros are ignored

Integrator's Reference
COMPATIBILITY MATRIX

Integration Access Point Compatibility Matrix:

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Network Interface	✓	✓		✓	
RadioRA® 2 Main Repeater			✓		
HomeWorks® QS Processor				✓	
Clear Connect® Gateway					✓

Device Compatibility Matrix:

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
GRAFIK Eye® QS	✓	✓	✓	✓	
seeTouch® Keypad	✓	✓	✓	✓	✓
Tabletop seeTouch® Keypad			✓	✓	
Architrave™ Keypad	✓	✓		✓	
Signature Series™ Keypad	✓	✓		✓	
Sivoia® QS Shade	✓	✓	✓	✓	✓
Maestro® Dimmer + Switch			✓	✓	✓
Maestro® Fan Speed Control			✓	✓	
Visor Control Receiver			✓	✓	
Hybrid Keypad			✓	✓	
Pico® Wireless Control	✓	✓	✓	✓	
Radio Powr Savr™ Sensor			✓	✓	✓
HVAC Controller			✓	✓	
Remote Power Module		✓		✓	
Energi Savr Node™ QS/DALI®	✓	✓			
Energi Savr Node™ QS/0–10 V (Int'l)	✓	✓			
Energi Savr Node™ QS/ EcoSystem®	✓	✓			
Energi Savr Node™ QS/0–10 V	✓	✓			
Energi Savr Node™ QS/ EcoSystem® (Int'l)	✓	✓		✓	
Energi Savr Node™ QS/ Motor Module (Int'l)		✓		✓	
Wallbox Input Closure Interface	✓	✓		✓	
Wireless Temperature Sensor				✓	
Energi Savr Node™ QS/Softswitch®	✓	✓			
Energi Savr Node™ QS/ Softswitch® (Int'l)	✓	✓			
Energi Savr Node™ QS/ Phase Adaptive (Int'l)	✓				
QS Input/Output Interface	✓	✓		✓	
QS Sensor Module	✓	✓			

Integrator's Reference *(continued)*
DEVICE: Command Summary

Device integration commands allow the user to access components of the system such as a physical device. The user can activate programming via button presses, releases, etc., as well as monitor those same events as they occur in real time in the system.

DEVICE Command Formats

Operation — *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command — *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Refer to device specific tables for lists of Component Numbers.

Action Numbers and Parameters:

Action	Action Number	Parameters
Enable	1	None[1]
Disable	2	None[1]
Press / Close / Occupied	3	None
Release / Open / Unoccupied	4	None
Hold[2]	5	None
Multi-tap[2]	6	None
Set or Get Current Scene[1,2]	7	Scene
Set (#) or Get (?) LED State	9	0 = Off 1 = On 2 = Normal Flash[2] 3 = Rapid Flash[2]
Set or Get Light Level[3,4]	14	0–100 or 0.00–100.00[3]
		SS.ss, SS, MM:SS, or HH:MM:SS[3]
		SS.ss, SS, MM:SS, or HH:MM:SS[3]

NOTES

1. Quantum® 2.7 and higher.
2. Not supported in RadioRA® 2.
3. Not supported by Quantum®.
4. Not supported by Clear Connect® Gateway.

Continued on next page…

Integrator's Reference *(continued)*
DEVICE: Command Summary *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Lock [1,2,3]	15	0 = Off 1 = On
Set or Get Scene Lock [1,2,3]	16	0 = Off 1 = On
Set or Get Sequence State [1,2,3]	17	0 = Off 1 = Scenes 1–4 2 = Scenes 5–16
Start Raising [3,4,5]	18	None
Start Lowering [3,4,5]	19	None
Stop Raising/Lowering [3,4,5]	20	None
Get battery status	22	1 = Normal, 2 = Low
Set a custom lift and tilt level of venetian blinds programmed to the phantom button [4,6]	23	Lift level % Tilt level %
Set a custom lift level only of venetian blinds programmed to the phantom button [4,6]	24	Lift level %
Set a custom tilt level only of venetian blinds programmed to the phantom button [4,6]	25	Tilt level %
Hold/Release[2]	32	None
GRAFIK Eye® QS Timeclock state	34	0 = Disabled 1 = Enabled
Query CCI state	35	None

NOTES

1. Not supported in HomeWorks® QS.
2. Not supported in RadioRA® 2.
3. Not supported by Quantum®.
4. Use OUTPUT command with equivalent action number in RadioRA® 2.
5. Use OUTPUT command with equivalent action number in HomeWorks® QS.
6. Use SHADEGRP command with equivalent action number in HomeWorks® QS.

Integrator's Reference *(continued)*
DEVICE: Command Summary *(continued)*

HomeWorks® QS Button Types and Integration Requirements:

Refer to Lutron® Designer software for setting up programming options.

Programming Options				Required Integration Action Numbers				
Buttton Type	Double Tap	Hold	Cycle Dim	Press (3)	Release (4)	Multi-Tap (6)	Hold (5)	Hold Release (32)
Single-Action and Toggle Buttons	–	–	–	✓	–	–	–	–
	✓	–	–	✓	–	✓	–	–
	–	✓	–	–	✓	–	✓	–
	✓	✓	–	–	✓	✓	✓	–
	–	–	✓	✓	✓	–	✓	✓
	✓	–	✓	✓	✓	✓	✓	✓
Dual Action Buttons	–	–	–	✓	✓	–	–	–
	✓	–	–	✓	✓	✓	–	–
Master and Single Scene Raise/Lower Buttons	–	–	–	✓	✓	–	–	–
Open/Stop/Close/ Stop Buttons	–	–	–	✓	–	–	–	–

RadioRA® 2 Button Types and Integration Requirements:

Refer to RadioRA® 2 Essentials/Inclusive software for setting up programming options.

Programming Options		Required Integration Action Numbers				
Buttton Type	Scene Save Enabled	Press (3)	Release (4)	Multi-Tap (6)	Hold (5)	Hold Release (32)
Single-Action and Toggle Buttons	–	✓	–	–	–	–
	✓	✓	–	–	✓	–
Master and Single Scene Raise/Lower Buttons	–	✓	✓	–	–	–
Shade Toggle Buttons	–	✓	–	–	–	–

Integrator's Reference *(continued)*
OUTPUT: Command Summary

Outputs are dimmers, CCOs, or other devices in a system that have a controllable output. All of these devices will accept levels from 0% to 100% and 0.00% to 100.00% with a given fade and delay time. These same commands can be monitored in real-time as they occur in the system.

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 6, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Level	1	0–100 or 0.00–100.00
		SS.ss[1], SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Start Flash[2]	5	SS.ss[1], SS, MM:SS, or HH:MM:SS
Pulse	6	SS.ss[1], SS, MM:SS, or HH:MM:SS
Set (#) or Get (?)[3,4] Venetian tilt level only	9	Tilt Level[5] = 0–100[6] or 0.00–100.00[5,6] Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[3] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Set (#) or Get (?)[4] Venetian lift & tilt level	10	Lift Level[5] = 0–100 or 0.00–100.00[5] Tilt Level[5] = 0–100[f] or 0.00–100.00[5,6] Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[3] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Start raising Venetian tilt	11	None[4]
Start lowering Venetian tilt	12	None[4]
Stop Venetian tilt	13	None[4]
Start raising Venetian lift	14	None[4]
Start lowering Venetian lift	15	None[4]
Stop Venetian lift	16	None[4]
Set DMX color/level settings[7]	17	Color/level index: 0–255/0.00–100.00[8]
Motor Jog Raise[7]	18	None[9]
Motor Jog Lower[7]	19	None[9]
Motor 4-Stage Jog Raise[7]	20	None[9]
Motor 4-Stage Jog Lower[7]	21	None[9]

NOTES

1. Fractions are rounded **up** to the closest 1/4 second.
2. To stop a dimmer from flashing, send it to a valid level (action 1).
3. The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0 seconds. The maximum delay time is 4 hours.
4. Not supported in Quantum®.
5. For switched outputs, any non-zero level results in on or closed, 0 results in off or open.
6. 50 for Horizontal Sheer Blinds.
7. Not supported in RadioRA® 2.
8. Supported in Quantum® version 2.2 and higher.
9. Supported in Quantum® version 2.5 and higher.

Integrator's Reference *(continued)*
GROUP[1]: Command Summary

The GROUP command is used to report the status of a group of occupancy sensors.

GROUP Command Format

Operation *Integration ID (example)*

?GROUP, 6, Action Number

Command *Use "GROUP Command-specific fields" tables to complete these command fields.*

NOTE

1. Not supported in QS Standalone.

GROUP Command-specific fields

Occupancy States:

Description	Value
Occupied	3
Unoccupied	4
Unknown	255

Action Numbers:

Action	Action Number
Get (?) Occupancy Group State	3

Example GROUP Messages

Operation	Command String
Query: ?GROUP, Integration ID, Action Number	
What is Occ GROUP 1's status?	*?GROUP,1,3*<CR><LF>
Response: ~ GROUP, Integration ID, Action Number, Parameters	
Occ group 1 is occupied	*~GROUP,1,3,3*<CR><LF>
Occ group 1 is unknown	*~GROUP,1,3,255*<CR><LF>

Integrator's Reference *(continued)*
MONITORING: Command Summary

Monitoring allows the user to configure what types of messages the system will report.

Note to Integrator: *The default values of these are set in the programming database and restored whenever the integration port is logged in. The user can temporarily change those settings to hide or show information as desired.*

MONITORING Command Formats

Operation
|
#MONITORING, Monitoring Type, Action Number
|
Command *Use "MONITORING Command-specific fields" tables to complete these command fields.*

MONITORING Command-specific fields

Monitoring Type:

Description	Monitoring Type
Diagnostic Monitoring	1
Event Monitoring	2
Button Monitoring	3
LED Monitoring[1]	4
Zone Monitoring	5
Occupancy	6
Scene #	8
System Variable	10
Reply State (if disabled, all messages FROM the integration access point will cease)	11
Prompt State (if disabled, the prompt will not be printed to the terminal)	12
Venetian Tilt[2]	14
Sequence Monitoring[1]	16
HVAC Monitoring[1,2]	17
Mode Monitoring[1,2]	18
Shade Group Monitoring[3]	23
Partition Wall[3]	24
Set (#) or Get (?) State of All Monitoring (except Reply and Prompt)	255

NOTES

1. Not supported in QS Standalone.
2. Not compatible with Quantum®.
3. Not supported in RadioRA® 2.

Action Numbers:

Action	Action Number
Enable	1
Disable	2

Integrator's Reference *(continued)*
ERROR: Command Summary

Integration Access Points will respond with an error if an invalid command is received. See the table below for explanations of different errors.

ERROR Command Formats

Operation
|
~ERROR, Error Number
|
Command *Refer to "ERROR Command-specific fields" table*

ERROR Command-specific fields

Error Numbers:

Description	Error Number
Parameter count mismatch	1
Object does not exist	2
Invalid action number	3
Parameter data out of range	4
Parameter data malformed	5
Unsupported Command	6

Example ERROR Messages

Operation	Command String
Parameter count mismatch: Too many or too few parameters for the specified action	
Too many parameters when activating scene	*#AREA,2,6,1,1,1,1,1*<CR><LF>
Parameter count mismatch.	*~ERROR,1*<CR><LF>
Object does not exist: The Integration ID or serial number entered does not map to a known part of the system	
Send command to an ID that is not valid	*#OUTPUT,1234,1,100.00*<CR><LF>
Object does not exist	*~ERROR,2*<CR><LF>
Invalid Action: The action does not exist for this command	
Send invalid action (4321) to Area 2	*#AREA,2,4321*<CR><LF>
Invalid action number	*~ERROR,3*<CR><LF>
Parameter data out of range: The parameter data is out of range for this action	
Send Output 11 to 120%	*#OUTPUT,11,1,120.00*<CR><LF>
Parameter data out of range	*~ERROR,4*<CR><LF>
Parameter data malformed: The parameter data given was not formatted properly	
Set Time to 12:23:24:25	*#SYSTEM,1,12:23:24:25*<CR><LF>
Invalid action number	*~ERROR,5*<CR><LF>

Integrator's Reference *(continued)*
HELP[1]: Command Summary

HELP Command for a specific Command Name provides command-name specific usage information.

HELP Command Formats

Operation
|
?HELP, Command Name[2], Action Number[3]
|
Command

NOTES

1. HELP not supported in QS Standalone.
2. The "Command Name" parameter is optional. If not entered, a list of all the supported Integration Commands will be printed. If a supported command name is entered, the corresponding actions will be listed.
3. The "Action" parameter is optional. When a valid action number is entered (i.e. it is supported by the corresponding "Command Name"), the help information for that particular action will be displayed.

Example HELP Messages

Operation	Command String
Query: #HELP, Command Name, Action Number	
What are all the supported Integration Commands?	*?HELP*<CR><LF>
What actions are available for #OUTPUT?	*?HELP,#OUTPUT*<CR><LF>
How is "Raise" used for #OUTPUT?	*?HELP,#OUTPUT,2*<CR><LF>
Response: ~HELP, Help Information	
The list of all Integration Commands.	*#OUTPUT,?OUTPUT,#DEVICE,?DEVICE,#AREA, ?AREA,#TIMECLOCK,?TIMECLOCK,#SYSTEM, ?SYSTEM,#MONITORING,?MONITORING,* <CR><LF>

The help information for the #OUTPUT command.	*~HELP, #OUTPUT* requires action<1–6><CR><LF>
	1 = Set Level / Position
	2 = Start Raising
	3 = Start Lowering
	4 = Stop Raising / Lowering
	6 = Pulse
	USAGE: #OUTPUT, <ID>, <action>,<CR><LF>

The help information for the "Raise" action (#OUTPUT).	*~HELP, #OUTPUT*, <action=2> start raising output level<CR><LF> USAGE: #OUTPUT, <ID>, <action=2><CR><LF>

Integrator's Reference *(continued)*
SYSTEM[1]: Command Summary

SYSTEM Command provides support for location, device and system specific information (e.g., Date, Time, Software Version Numbers).

SYSTEM Command Formats

Operation
|
#SYSTEM, Action Number, Parameters
|
Command *Use "SYSTEM Command-specific fields" tables to complete these command fields.*

NOTE

1. Not supported in QS Standalone.

SYSTEM Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?)Time[1]	1	Time in: SS.ss, SS, MM:SS, or HH:MM:SS
Set or Get Date	2	Date in MM/DD/YYY
Set or Get Latitude and Longitude	4	Latitude = –90.00 to +90.00 degrees Longitude = –180.00 to +180.00 degrees
Set or Get Time Zone[2]	5	Hours = –12 to 12 Minutes = 0 to 59
Get Sunset	6	None
Get Sunrise	7	None
Get OS Rev	8	None
Set Load Shed[3]	11	0 = Disabled 1 = Enabled

NOTES

1. The system time must be entered in 24 hour format.
2. The Time Zone is referenced to GMT.
3. Load Shed commands available only on Quantum® version 2.0 and higher.

Example SYSTEM Messages

Operation	Command String
Execute: #SYSTEM, Action Number, Parameters	
Set time to 5:45 PM.	*#SYSTEM,1,17:45*<CR><LF>
Set date to June 1, 2009.	*#SYSTEM,2,06/01/2009*<CR><LF>
Query: ?SYSTEM, Action Number	
What is the system time?	*?SYSTEM,1*<CR><LF>
What is the system date?	*?SYSTEM,2*<CR><LF>
Response: ~SYSTEM, Action Number, Parameters	
The system time is 11:05 AM.	*~SYSTEM,1,11:05:00*<CR><LF>
The system date is July 3, 2009.	*~SYSTEM,2,07/03/2009*<CR><LF>

QS Standalone
System Overview

The QS family of products delivers scalable lighting and shading solutions for residential and commercial applications. At the center of the QS system are the GRAFIK Eye® QS control units, Energi Savr Node™ control units, and Sivoia® QS shades and drapes, providing direct control of electric and natural light. QS system devices communicate over the highly flexible QS link; the link allows for daisy-chain or t-tap wiring configurations. All QS system devices communicate without the need for interfaces, and addressing is automatic, eliminating the need to set DIP switches. In addition, QS keypads are configurable in the field to control lights, shades, lights + shades, or third-party devices. The QS system can be easily integrated with other systems through contact-closure input/output, DMX output, or Ethernet/RS232.

QS System Device Compatibility Index:

	QS Standalone
GRAFIK Eye® QS	✓
seeTouch® QS	✓
Sivoia® QS Shade	✓
Energi Savr Node™ QS DALI®	✓
Energi Savr Node™ QS EcoSystem® (Int'l)	✓
Energi Savr Node™ QS 0–10 V/Softswitch® (Int'l)	✓
Energi Savr Node™ QS Phase Adaptive (Int'l)	✓
Energi Savr Node™ QS EcoSystem®	✓
Energi Savr Node™ QS 0–10 V/Softswitch®	✓
Energi Savr Node™ QS Motor Module (Int'l)	✓
QSE-IO Control Interface	✓
QS Sensor Module	✓
QS Wall Control Interface	✓

QS Standalone *(continued)*
Integration Access Points
Network Interface

Model: QSE-CI-NWK-E

Why Integrate with a QSE-CI-NWK-E?

- Integrates a QS lighting control system with a PC or other digital equipment that supports RS232 or Ethernet TCP/IP connection.
- Allows monitor and control of system devices. For example, the QSE-CI-NWK-E can be used to simulate button presses, report button presses, control light levels, and monitor light levels.

Supported Commands

- **MONITORING** specifies what type of messages the system will report
- **ETHERNET** modifies the Ethernet configurations of the QSE-CI-NWK-E
- **RESET** restarts the QSE-CI-NWK-E or restores it to factory defaults
- **INTEGRATION ID** assigns IDs to devices, so that they may be referred to in a more logical fashion
- **DETAILS** returns information about a QS device
- **ERROR** reports syntax errors in an integration string command or query
- **PROGRAMMING** allows user to program Phantom Buttons on the NWK supported in version 8.0 or higher
- **DEVICE** used to activate Phantom Buttons on the NWK
- **OUTPUT** used to control outputs of a Device
- “Programming” and “Device” commands require version 8.0 or higher of the NWK software

QS Standalone *(continued)*
Integration Access Points *(continued)*

Connection Information

Provides an RS232 and Ethernet connection to communicate with external equipment. Communication is through either RS232 or Ethernet, but not both simultaneously.

RS232

The RS232 connection has the following communication settings:

- Baud Rate 9600/19200/38400/115200 (set via dipswitch on unit)
- 8 data bits
- No parity bit
- 1 stop bit
- No flow control

Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the QS system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a QSE-CI-NWK-E through a network. The information below will help an installer communicate the QSE-CI-NWK-E configurations to a network professional.

The installer will make any necessary changes to the control interface using the Lutron® DeviceIP or PC software tool and the network professional can make any necessary changes to the networking equipment.

Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

TCP/IP Settings

- IP Address: <static default = 192.168.250.1>
- Subnet Mask: <static default = 255.255.255.0>
- Gateway: <static default = 0.0.0.0>

Protocols Used for Integration

- TELNET

Telnet Server

- Used by third party equipment (i.e. touch screen)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Login #1: nwk
- Login #2: nwk2

QS Standalone *(continued)*
System Commands
ETHERNET Commands

ETHERNET Command Formats

Operation
|
#ETHERNET, Configuration Number, Parameters
|
Command *Use "ETHERNET Command-specific fields" tables to complete these command fields.*

ETHERNET Command-specific fields

Configuration Numbers:

Description	Configuration Number	Parameters
Get/Set IP Address	0	Address (XXX.XXX.XXX.XXX)
Get/Set Gateway Address	1	Address (XXX.XXX.XXX.XXX)
Get/Set Subnet Mask	2	Address (XXX.XXX.XXX.XXX)
Get/Set Login Info	3	User (0=All users; 1=User 1; 2=User 2), Old Login, New Login

Example ETHERNET Commands

Operation	Command String
Execute: #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	*#ETHERNET,0,192.168.250.1*<CR><LF>
Set Gateway Address to 10.2.4.1	*#ETHERNET,1,10.2.4.1*<CR><LF>
Query: ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	*?ETHERNET,0*<CR><LF>
What is the Login Information for user 1?	*?ETHERNET,3,1*<CR><LF>
What is the Login Information for ALL users? (**Note:** 0=ALL)	*?ETHERNET,3,0*<CR><LF>
Response: ~DEVICE, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	*~ETHERNET,0=,192.168.250.1*<CR><LF>

QS Standalone *(continued)*
System Commands *(continued)*
INTEGRATION ID Commands

INTEGRATION ID Command Formats

Operation
|
#INTEGRATIONID, Action Number, Parameters
|
Command *Use "INTEGRATIONID Command-specific fields" tables to complete these command fields.*

INTEGRATION ID Command-specific fields

Action Numbers and Parameters:

Description	Action Number	Parameters
Set or Get Integration ID for a Serial Number	1	Serial Number = 8 character HEX serial number of the device Integration ID = The integration ID to be assigned.
Change Integration ID	2	Current Integration ID, New Integration ID **Note:** An error will be reported if the new Integration ID is the same as an existing Integration ID in the system.
Get Info from ID	3	Integration ID **Note:** If this field is left blank, all integration IDs will be printed.
Set or Get output Integration ID	4	Serial Number, Component Number, Integration ID

Example INTEGRATION ID Commands

Operation	Command String
Execute: #INTEGRATIONID, Action Number, Parameters	
Set the Integration ID for a serial number	*#INTEGRATIONID,1,1234ABCD,kitchen dimmer*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Set the Integration ID for a serial number	*~INTEGRATIONID,1,1234ABCD,kitchen dimmer*<CR><LF>
Execute: ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	*?INTEGRATIONID,1,5678EFEF*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	*~INTEGRATIONID,1,5678EFEF,living room keypad*<CR><LF>
Execute: #INTEGRATIONID, Action Number, Parameters	
Change the Integration ID	*#INTEGRATIONID,2,diningroomlights1,diningroomaccents*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Change the Integration ID	*~INTEGRATIONID,2,diningroomlights1,diningroomaccents*<CR><LF>
Execute: ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	*?INTEGRATIONID,3,livingroomkeypad*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	*~INTEGRATIONID,3,livingroomkeypad,DEVICE,5678EFEF*<CR><LF>

QS Standalone *(continued)*
System Commands *(continued)*
DETAILS String

DETAILS Command Formats

Operation
|
?DETAILS, ID [1]
|
Command

NOTE

1. Device ID may be entered as the serial ID number or the Integration ID. Use ALL_DEVICES or FFFFFFFF to query all devices on the link.

Example DETAILS String

Operation	Command String
Query: ?DETAILS, ID	
Get details of the device with serial ID number 00AC123D	*?DETAILS,00AC123D*<CR><LF>
Response: ~DETAILS, Serial Number, Name, Family, Model, Software Rev., Boot Software Rev.	
The device with serial ID number 00AC123D has the following information: Name = GRAFIK Eye 1 Product Family = GRAFIK Eye Product Model = QSG Software Revision = 1.70 Boot Code Software Revision = 2	*~DETAILS,SN:00AC123D,IntegrationID:GRAFIKEye1,Family:GRAFIK_Eye(2),Product:QSG(1),CODE:1.70,Boot:2.1,HW:1.1*<CR><LF>

QS Standalone *(continued)*
System Commands *(continued)*
RESET Commands

RESET Command Formats

Operation
|
#RESET, Action Number
|
Command *Use "RESET Command-specific fields" tables to complete these command fields.*

RESET Command-specific fields

Action Numbers:

Action	Action Number
Restart the device	0
Restore to factory defaults	1
Restore to factory defaults (does not affect the IP address, Gateway address, subnet mask settings)	2

Example RESET Commands

Operation	Command String
Execute: #RESET, Action Number	
Restart the NWK	*#RESET,0*<CR><LF>
Restore NWK to factory defaults	*#RESET,1*<CR><LF>

QS Standalone *(continued)*
System Commands *(continued)*
PROGRAMMING Commands

PROGRAMMING Command Formats

Operation — *Integration ID or Serial # of the QSE-CI-NWK being used*

#PROGRAMMING, 1, Button Number, Action Number, Parameters

Command — *Phantom Button Number (can be 1–100)* — *Use "PROGRAMMING Command-specific fields" tables to complete these command fields.*

PROGRAMMING Command-specific fields

Action Numbers and **Parameters:**

Description	Action Number	Parameters
Add programming to a phantom button	1	a) Integration ID – The Integration ID of the device b) Component Number – Always '0' for Shade c) Level – The level to which the shade being programmed will go on activation of this button d) Fade – The time the zone takes to reach the level specified (maximum 4 hours)[1] e) Delay – The time until the Shade/Zone begins to change (maximum 4 hours)
Add Scene programming to a phantom button	2	a) Integration ID b) Component Number (GRAFIK Eye® QS Scene controller, Energi Savr Node™ area[2]) c) Scene Number
Clear programming from a phantom button. **Note:** Use 0 to clear programming from all buttons.	3	None
Configure Stop-If-Moving functionality **Note:** Use button 0 to configure Stop-If-Moving functionality on all buttons.	4	0 = Stop-If-Moving Off 1 = Stop-If-Moving On
Add programming to a phantom button (Venetian blind, lift and tilt levels)	5	a) Venetian Integration ID b) Component Number (always 0) c) Lift level d) Tilt level
Add programming to a phantom button (Venetian blind, tilt only)	6	a) Venetian Integration ID b) Component Number (always 0) c) Tilt level
Add programming to a phantom button (Venetian blind, lift only)	7	a) Venetian Integration ID b) Component Number (always 0) c) Lift level

NOTES

A maximum of 500 programming assignments can be made in the QSE-CI-NWK-E.

1. Not available for Shades.
2. If a device's Zone is already assigned to the button, you cannot program a Scene for that Zone. If a Scene is already programmed for this button for a device, you cannot program another Scene.

QS Standalone *(continued)*
System Commands *(continued)*
PROGRAMMING Commands *(continued)*

Example PROGRAMMING Commands

For a system of one shade (Integration ID "living room sheer"), one Venetian blind ("kitchen venetian"), and one QSE-CI-NWK (Integration ID "1"), the following examples show how programming can be done.

Operation	Command String
Add shade at 100% to phantom button 1	*#PROGRAMMING,1,1,1,living room sheer,0,100*<CR><LF>
Response Received	*~PROGRAMMING,1,1,1,living room sheer,0,100*<CR><LF>
Add Venetian blind at 0% lift and 50% tilt to phantom button 2	*#PROGRAMMING,1,2,5,kitchen venetian,0,0,50*<CR><LF>
Response Received	*~PROGRAMMING,1,2,5,kitchen venetian,0,0,50*<CR><LF>
Add Venetian blind at 75% tilt to phantom button 3	*#PROGRAMMING,1,3,6,kitchen venetian,0,75*<CR><LF>
Response Received	*~PROGRAMMING,1,3,6,kitchen venetian,0,75*<CR><LF>
Add Venetian blind at 15% lift to phantom button 4	*#PROGRAMMING,1,4,7,kitchen venetian,0,15*<CR><LF>
Response Received	*~PROGRAMMING,1,4,7,kitchen venetian,0,15*<CR><LF>
Add shade at 50% to phantom button 2	*#PROGRAMMING,1,2,1,dining room blackout,0,50*<CR><LF>
Response Received	*~PROGRAMMING,1,2,1,dining room blackout,0,50*<CR><LF>
Turn On Stop-If-Moving for phantom button 5	*#PROGRAMMING,1,5,4,1*<CR><LF>
Response Received	*~PROGRAMMING,1,5,4,1*<CR><LF>
Clear programming from all the phantom buttons	*#PROGRAMMING,1,0,3*<CR><LF>
Response Received	Repeat command to clear all phantom button programming
Repeat command to clear all phantom button programming	*#PROGRAMMING,1,0,3*<CR><LF>
Response Received	*~PROGRAMMING,1,0,3*<CR><LF>
Clear programming from phantom button 6	*#PROGRAMMING,1,6,3*<CR><LF>
Response Received	*~PROGRAMMING,1,6,3*<CR><LF>

QS Standalone *(continued)*
System Commands *(continued)*
PROGRAMMING Commands *(continued)*

PROGRAMING Command Formats

Operation — *Integration ID or Serial # of the QSE-CI-NWK being used*

?PROGRAMMING, 1, Button Number, Action Number

Command — *Phantom Button Number (can be 1–100)* — *Use "PROGRAMMING Command-specific fields" tables to complete these command fields.*

PROGRAMMING Command-specific fields

Action Numbers and **Parameters:**

Description	Action Number	Parameters
Display programming of a specific phantom button **Note:** To display programming of all phantom buttons, leave the button # field blank	None	None
Display Stop-If-Moving configuration of a specific phantom button **Note:** To display Stop-If-Moving configuration of all phantom buttons, use button #0	4	None

Example PROGRAMMING Commands

The following examples show how to verify the programming of the phantom buttons of a QSE-CI-NWK-E with an Integration ID of "1."

Operation	Command String
Display programming of phantom button 1	*?PROGRAMMING,1,1*<CR><LF>
Display programming of all phantom buttons	*?PROGRAMMING,1*<CR><LF>
Display Stop-If-Moving configuration of phantom button 5	*?PROGRAMMING,1,5,4*<CR><LF>
Display Stop-If-Moving configuration of all phantom buttons	*?PROGRAMMING,1,0,4*<CR><LF>

QS Standalone *(continued)*
System Commands *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation | *Integration ID or Serial # of the QSE-CI-NWK being used*

#DEVICE, 1, Button Number, Action Number, Parameters

Command | *Phantom Button Number (can be 1–100)* | *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Action Numbers and **Parameters:**

Description	Action Number	Parameters
Activate the phantom button preset	3	None
Set a custom level of the shades, lighting zones programmed to the phantom button	14[1]	Level: The level the shades will go to[1]
Raise the shades	18[2]	None
Lower the shades	19[2]	None
Stop the shades	20	None
Set a custom lift and tilt level of venetian blinds programmed to the phantom button	23[1]	Lift level % Tilt level %
Set a custom lift level only of venetian blinds programmed to the phantom button	24[1]	Lift level %
Set a custom tilt level only of venetian blinds programmed to the phantom button	25[1]	Tilt level %

NOTES

1. Specifying a custom level above will not affect the preset level programmed for the phantom button.
2. For Venetian blinds, the Raise & Lower Actions will affect either the lift or the tilt based on how the phantom button was programmed. If #PROGRAMMING Action 5 is used (affecting both lift and tilt levels), then the Raise & Lower Actions will affect the tilt.

Example DEVICE Commands

The following examples show how we can activate phantom buttons on a link with a QSE-CI-NWK-E whose Integration ID is "1."

Operation	Command String
Activate Preset on phantom button 1	*#DEVICE,1,1,3*<CR> <LF>
Set the level of all shades programmed to phantom button 2 to 50%	*#DEVICE,1,2,14,50*<CR><LF>
Set all venetian blinds programmed to phantom button 3 to a lift level of 50% and tilt level of 25%	*#DEVICE,1,3,23,50,25*<CR><LF>
Set all venetian blinds programmed to phantom button 4 to a lift level of 50%	*#DEVICE,1,4,24,50*<CR><LF>
Set all venetian blinds programmed to phantom button 5 to a tilt level of 25%	*#DEVICE,1,5,25,25*<CR><LF>
Raise the shades and venetian blinds programmed to phantom button 6	*#DEVICE,1,6,18*<CR><LF>
Lower shades and venetian blinds programmed to phantom button 7	*#DEVICE,1,7,19*<CR><LF>
Stop shades and venetian blinds programmed to phantom button 8	*#DEVICE,1,8,20*<CR><LF>

RadioRA® 2 System Overview

RadioRA® 2 is a wireless multi-room control system for lights and shades. The system is made up of repeaters, dimmers, keypads, and other devices. The Lutron® proven, patented RF technology ensures reliable performance. With the RadioRA® 2 system, you can: create the right ambience for varied activities, easily monitor and control your lights, reduce energy usage, and increase safety in and around your home.

RadioRA® 2 System Device Compatibility Index:

	RadioRA® 2
Maestro® Dimmer	✓
Tabletop seeTouch® Keypad	✓
Visor Control Receiver	✓
GRAFIK Eye® QS	✓
seeTouch® Keypad	✓
Sivoia® QS Wireless Shade	✓
Hybrid Keypad	✓
Pico® Wireless Control	✓
Radio Powr Savr™ Sensor	✓
HVAC Controller	✓
Plug-In Module	✓

RadioRA® 2 *(continued)*
Integration Access Points
Main Repeater

Model: RR-MAIN-REP-WH, RRK-MAIN-REP-WH

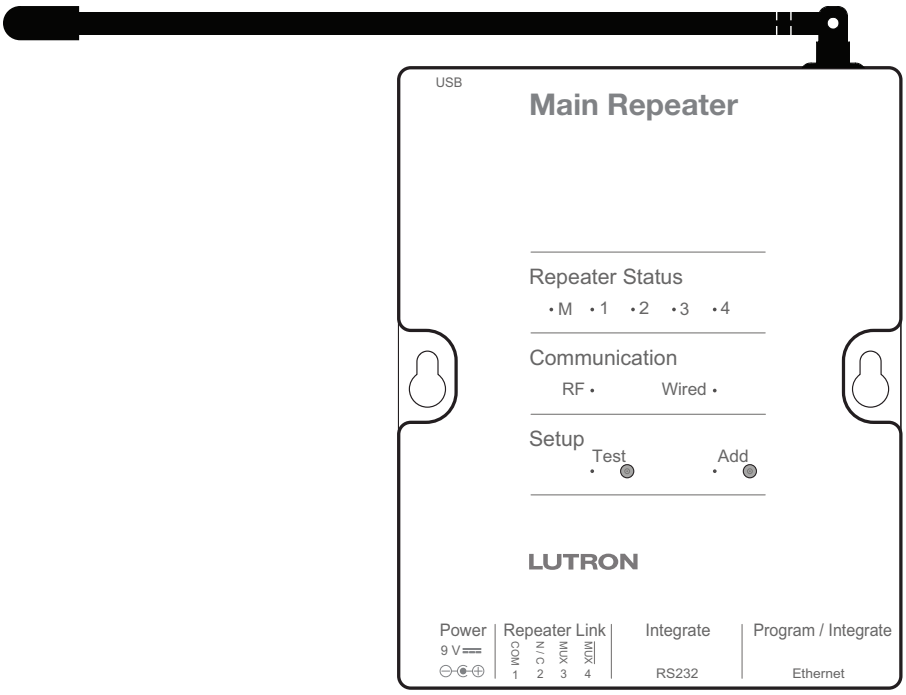

Why Integrate with a RadioRA® 2 Main Repeater?

- Integrates a RadioRA® 2 lighting control system with a PC or other digital equipment that supports RS232 or Ethernet TCP/IP communication.
- Allows monitoring and control of system devices. For example, the Main Repeater can be used to simulate button presses, report button presses, monitor LEDs, and control light levels of dimmers.

Integration Capabilities

- 100 “virtual” programmable buttons with LEDs (use DEVICE command)
- Monitoring of changes to other system devices (use MONITORING command)

Additional Commands

- **MONITORING** commands are used to program what types of messages the system will report

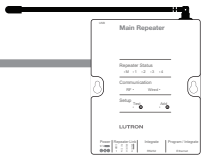

RadioRA® 2 *(continued)*
Integration Access Points *(continued)*

Connection Information

Provides an RS232 and Ethernet connection to communicate with external equipment.

RS232

The RS232 connection has the following communication settings:

- Baud Rate 9600
- 8 data bits
- No parity bit
- 1 stop bit
- No flow control

Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the RadioRA® 2 system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a control interface through a network. The information below will help an installer communicate the control interface configurations to a network professional.

The installer will make any necessary changes to the control interface using the Lutron® DeviceIP or RadioRA® 2 PC software tool and the network professional can make any necessary changes to the networking equipment.

Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

TCP/IP Settings

- DHCP (dynamic) or static configuration <factory default = DHCP>
- IP Address: <static default = 192.168.1.50 or dynamic configuration>
- Subnet Mask: <static default = 255.255.255.0 or dynamic configuration>
- Gateway: <static default = 0.0.0.0 or dynamic configuration>

Protocols Used for Integration

- TELNET

Telnet Server

- Up to 4 telnet sessions can be accessed through Essentials Software
- Used by software and/or third party equipment (e.g., touch screen)
- Limited to transferring ASCII characters
- Login: lutron
- Password: integration

Notes:

– Up to four additional login and password values can be defined in the RadioRA® 2 PC software.
– Only one connection per login/password is allowed at a time.

UDP Multicast Messaging

- Used by the RadioRA® 2 PC software during device configuration and system programming
- There are no user modifiable settings for UDP messaging

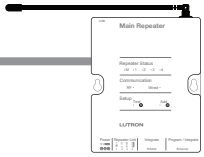

RadioRA® 2 *(continued)*
System Commands
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 1, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1–100	1–100	Press, Release
LED 1–100	101–200	Set or Get LED state

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set or Get LED State	9	0 = Off 1 = On

Example DEVICE Commands

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,4,1,3*<CR><LF>
Release Button 1	*#DEVICE,4,1,4*<CR><LF>
Turn On LED 1.	*#DEVICE,4,101,9*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,4,101,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,4,101,9,1*<CR><LF>

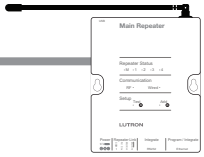

RadioRA® 2 *(continued)*
System Commands *(continued)*
GROUP Commands

GROUP Command Format

Operation *Integration ID (example)*

?GROUP, 6, Action Number

Command *Use "GROUP Command-specific fields" tables to complete these command fields.*

GROUP Command-specific fields

Occupancy States:

Description	Value
Occupied	3
Unoccupied	4
Unknown	255

Action Numbers:

Action	Action Number
Get (?) Occupancy Group State	3

Example GROUP Messages

Operation	Command String
Query: ?GROUP, Integration ID, Action Number	
What is Occ GROUP 1's status?	*?GROUP,1,3*<CR><LF>
Response: ~ GROUP, Integration ID, Action Number, Parameters	
Occ group 1 is occupied	*~GROUP,1,3,3*<CR><LF>
Occ group 1 is unknown	*~GROUP,1,3,255*<CR><LF>

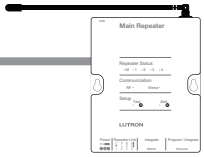

RadioRA® 2 *(continued)*
System Commands *(continued)*
MONITORING Commands

MONITORING Command Formats

Operation

#MONITORING, Monitoring Type, Action Number

Command *Use "MONITORING Command-specific fields" tables to complete these command fields.*

MONITORING Command-specific fields

Monitoring Type:

Description	Monitoring Type
Diagnostic Monitoring	1
Button Monitoring (if enabled, button actions will be reported)	3
LED Monitoring (if enabled, LED states will be reported)	4
Zone Monitoring (if enabled, zone levels will be reported, i.e. dimmer, shade, contact closure output level)	5
Reply State (if disabled, all messages FROM the integration access point will cease)	11
Prompt State (if disabled, the prompt will not be printed to the terminal)	12
Set or Get State of All Monitoring (except Reply and Prompt)	255

Action Numbers:

Action	Action Number
Enable	1
Disable	2

Example MONITORING Commands

Operation	Command String
Execute: #MONITORING, Monitoring Type, Action Number	
Disable Diagnostic Monitoring.	*#MONITORING,1,2*<CR><LF>
Enable Event Monitoring.	*#MONITORING,2,1*<CR><LF>
Query: ?MONITORING, Monitoring Type	
Is Diagnostic Monitoring disabled?	*?MONITORING,1*<CR><LF>
Response: ~MONITORING, Monitoring Type, Action Number	
Diagnostic Monitoring is disabled.	*~MONITORING,1,2*<CR><LF>

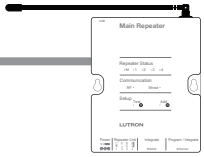

RadioRA® 2 *(continued)*
System Commands *(continued)*
TIMECLOCK Commands

TIMECLOCK Command Formats

Operation *Integration ID (example)*

#TIMECLOCK, 4, Action Number, Parameters

Command *Use "TIMECLOCK Command-specific fields" tables to complete these command fields.*

TIMECLOCK Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) Current Timeclock Mode[1]	1	Mode
Get (?) Current Timeclock Mode	1	None
Get (?) Sunrise Time	2	None
Get (?) Sunset Time	3	None
Get (?) Day's Schedule	4	None
Execute (#) event	5	Index of the event to test. The index number of the first event is 1; the second event is 2, and so on.
Enable/Disable Event	6	Event Index, Enable State (1 = Enable, 2 = Disable)

NOTE

1. In order to set the Timeclock Mode, the "mode" settings must first be determined using the ?help,#timeclock,1 command.

Example TIMECLOCK Messages

Operation	Command String
Execute: #TIMECLOCK, Integration ID, Action Number, Parameters	
Execute the 3rd event of the time clock.	*#TIMECLOCK,4,5,3*<CR><LF>
Query: ?TIMECLOCK, Integration ID, Action Number	
What is the sunrise time?	*?TIMECLOCK,4,2*<CR><LF>
Response: ~TIMECLOCK, Integration ID, Action Number, Parameters	
The time the sun rises.	*~TIMECLOCK,4,2,05:32*<CR><LF>

Clear Connect® Gateway System
System Overview

The Clear Connect® Gateway System is a wireless multi-room control system for lights and shades. The system is made up of repeaters, dimmers, keypads, and other devices. The Lutron® proven, patented RF technology ensures reliable performance. With the Clear Connect® Gateway system, you can: create the right ambience for varied activities, easily monitor and control your lights, reduce energy usage, and increase safety in and around your home.

Clear Connect® System Device Compatibility Index:

	Clear Connect® Gateway System
Maestro® Dimmer	✓
seeTouch® Keypad	✓
Sivoia® QS Wireless Shade	✓
Radio Powr Savr™ Sensor	✓

Clear Connect® Gateway System *(continued)*
Integration Access Points

Models: NXB-CCG, NXB-CCG-K

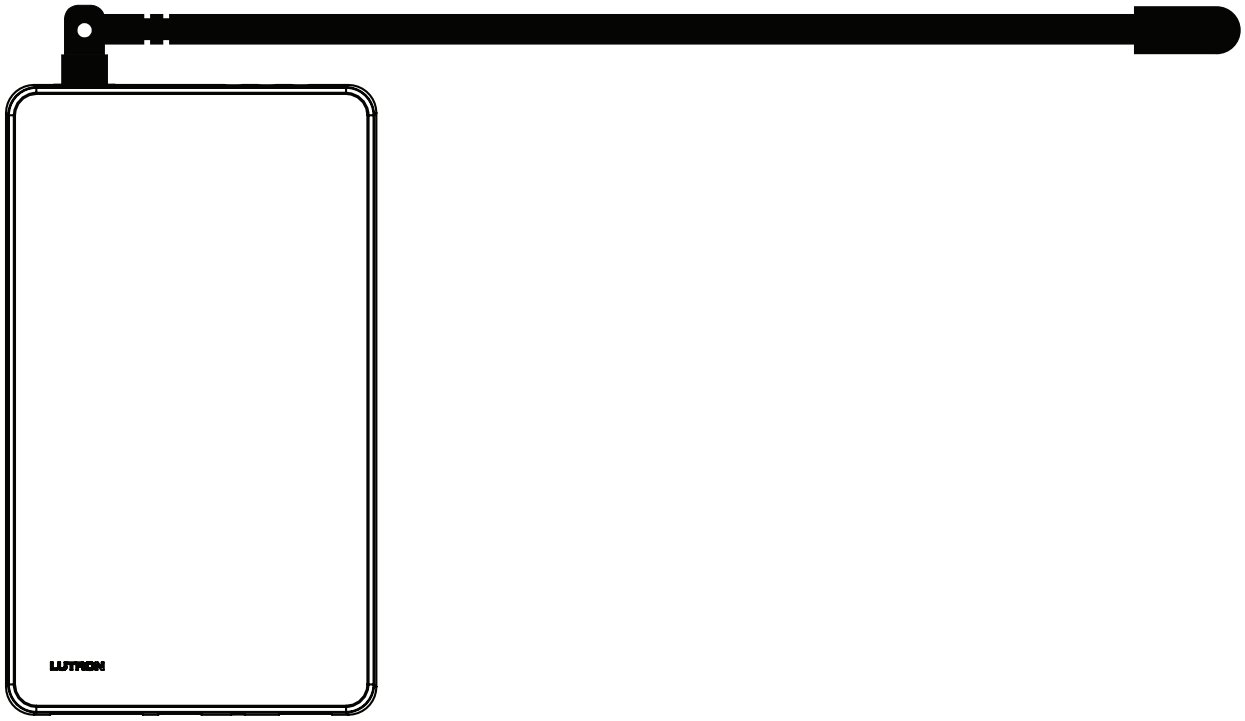

Why Integrate with a Clear Connect® Gateway System?

- Integrates a Clear Connect® lighting control system with a PC or other digital equipment that supports Ethernet TCP/IP communication.
- Allows monitoring and control of system devices. For example, the Translator can be used to simulate button presses, report button presses, monitor LEDs, and control light levels of dimmers.

Integration Capabilities

- 100 “virtual” programmable buttons with LEDs (use DEVICE command).

Additional Commands

- **PING** commands are used to verify network connectivity.

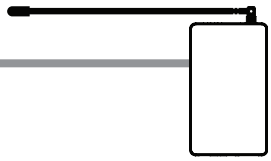

Clear Connect® Gateway System *(continued)*
Integration Access Points *(continued)*

Connection Information

Provides an Ethernet connection to communicate with external equipment.

Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the Clear Connect® Gateway System, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a control interface through a network. The information below will help an installer communicate the control interface configurations to a network professional.

The installer will make any necessary changes to the control interface using the Integrated Web Configuration tool and the network professional can make any necessary changes to the networking equipment.

Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

TCP/IP Settings

- DHCP (dynamic) or static configuration <factory default = DHCP>
- IP Address: <static or dynamic configuration>
- Subnet Mask: <static or dynamic configuration>
- Gateway: <static or dynamic configuration>

Protocols Used for Integration

- Raw socket (Telnet port)
- SSH

Server

- Up to 10 usernames can be created. Each username supports multiple simultaneous connections
- Used by software and/or third party equipment (i.e. touch screen)
- Limited to transferring ASCII characters
- Raw Socket port number is 23; can be changed in the Web Configuration tool
- SSH port number is 22; cannot be changed
- Default Integration Login information
  - NXB-CCG / NXB-CCG-K:
    - **Login:** amx
    - **Password:** clearconnect

Continued on next page…

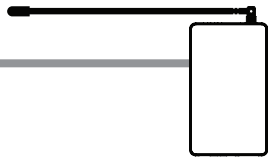

Clear Connect® Gateway System *(continued)*
Integration Access Points *(continued)*

Connection Information *(continued)*

System Configuration

- Default web admin information
  NXB-CCG / NXB-CCG-K:
    – Login: admin
    – Password: 1988
- XML file extraction is supported
  a) Browsing to "/xml" after logging in will return the XML data for the system
  b) Browsing to "/xml?login=<user>&password=<password>" will return the XML data without first having to log in
    Note: The "login" info can use either web login or integration login credentials.
- ZeroConf discovery of the CCT device
  a) The device will present itself as:
    – NXB-CCG or NXB-CCG-K will present itself as "NXB-CCG-<Numeric Portion of Serial Number>"
  b) The domain suffix is displayed next to the hostname in the Web Configuration tool

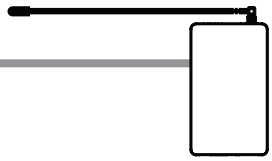

Clear Connect® Gateway System *(continued)*
System Commands
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 1, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1–100	1–100	Press, Release
LED 1–100	101–200	Set or Get LED state

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set or Get LED State	9	0 = Off 1 = On

Example DEVICE Commands

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,4,1,3*<CR><LF>
Release Button. 1	*#DEVICE,4,1,4*<CR><LF>
Turn On LED 1.	*#DEVICE,4,101,9*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,4,101,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,4,101,9,1*<CR><LF>

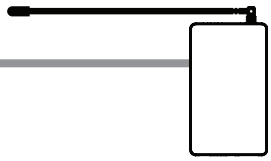

Clear Connect® Gateway System *(continued)*
System Commands *(continued)*
GROUP Commands

GROUP Command Format

Operation *Integration ID (example)*

?GROUP, 6, Action Number

Command *Use "GROUP Command-specific fields" tables to complete these command fields.*

GROUP Command-specific fields

Occupancy States:

Description	Value
Occupied	3
Unoccupied	4
Unknown	255

Action Numbers:

Action	Action Number
Get (?) Occupancy Group State	3

Example GROUP Messages

Operation	Command String
Query: ?GROUP, Integration ID, Action Number	
What is Occ GROUP 1's status?	*?GROUP,1,3*<CR><LF>
Response: ~ GROUP, Integration ID, Action Number, Parameters	
Occ group 1 is occupied	*~GROUP,1,3,3*<CR><LF>
Occ group 1 is unknown	*~GROUP,1,3,255*<CR><LF>

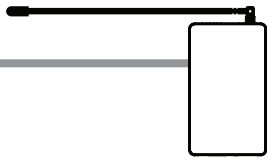

Clear Connect® Gateway System *(continued)*
System Commands *(continued)*
PING Commands

PING Command Formats

Operation
|
#PING
|
Command

Example PING Command

Operation	Command String
Execute: #PING	
Ping to verify connectivity	*#PING*
Response: ~PING	
Connection is established	*~PING*

Quantum®
System Overview

The Quantum® system is the Lutron® premier commercial lighting control system. It allows the control and monitoring of individual devices and outputs as well as allowing control of entire areas, shade groups or other portions of the system. The Quantum® system includes QS devices such as the GRAFIK Eye® QS and Sivoia® QS shades as well as Lutron® EcoSystem® ballasts and GRAFIK™ dimming panels. When integrating with a Quantum® system the integrator gets additional access to portions of a the system not available when using products in stand-alone mode, particularly the ability to activate scenes on an area-by-area basis and to control the position of and activate presets on entire groups of shades at once.

Quantum® System Device Compatibility Index:

	Quantum®
GRAFIK Eye® QS	✓
seeTouch® QS	✓
Sivoia® QS Shade	✓
QS Input/Output Interface	✓
Energi Savr Node™ QS DALI®	✓
Energi Savr Node™ QS EcoSystem® (Int'l)	✓
Energi Savr Node™ QS 0–10 V/Softswitch® (Int'l)	✓
Energi Savr Node™ QS Phase Adaptive (Int'l)	✓
Energi Savr Node™ QS EcoSystem®	✓
Energi Savr Node™ QS 0–10 V/Softswitch®	✓

Why Integrate with a Quantum® System

- Compatible with Quantum® system version 1.7 or higher
- Gain access to system-only information
- Activate System Area scenes
- Set levels for System Outputs
- Activate System Shade Group presets
- View and modify parameters of a Quantum® system, such as time, date, time zone, etc.

Command Types

Operation characters will be followed by command types:

- **AREA** allows control of an area in the Quantum® system. Scenes can be activated, occupancy monitored etc.
- **SHADEGRP** allows control of shade groups in the Quantum® system. Shade Groups are collections of shades that operate in unison
- **OUTPUT** allows control and monitoring of a Quantum® system output group such as a lighting zone or closure output.
- **SYSTEM** allows setting and controlling system parameters and variables*
- **HELP** displays usage information for the supported commands and their corresponding actions
- **INTEGRATION ID** allows querying integration IDs of devices in the system

* Load Shed commands available only on Quantum® version 2.0 and higher.

Quantum® *(continued)*
Integration Access Points
Network Interface

Model: QSE-CI-NWK-E

Why Integrate with a QSE-CI-NWK-E?

- Integrates a QS lighting control system with a PC or other digital equipment that supports RS232 or Ethernet TCP/IP connection.
- Allows monitor and control of system devices. For example, the QSE-CI-NWK-E can be used to simulate button presses, report button presses, monitor LEDs, and control light levels.

Additional Commands

- **MONITORING** specifies what type of messages the system will report
- **ETHERNET** modifies the Ethernet configurations of the QSE-CI-NWK-E
- **RESET** restarts the QSE-CI-NWK-E or restores it to factory defaults
- **INTEGRATION ID** assigns IDs to devices, so that they may be referred to in a more logical fashion
- **DETAILS** returns information about a QS device
- **ERROR** reports syntax errors in an integration string command or query

Quantum® *(continued)*
Integration Access Points *(continued)*

Connection Information

Provides an RS232 and Ethernet connection to communicate with external equipment.

RS232

The RS232 connection has the following communication settings:

- Baud Rate 9600/19200/38400/115200 (set via dipswitch on unit)
- 8 data bits
- No parity bit
- 1 stop bit
- No flow control

Ethernet

Configuring the control interface to communicate over a network takes not only knowledge of the Quantum® system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a QSE-CI-NWK-E through a network. The information below will help an installer communicate the QSE-CI-NWK-E configurations to a network professional.

The installer will make any necessary changes to the control interface using the Lutron® DeviceIP or Quantum® PC software tool and the network professional can make any necessary changes to the networking equipment.

Single Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better

TCP/IP Settings

- IP Address: <static default = 192.168.250.1>
- Subnet Mask: <static default = 255.255.255.0>
- Gateway: <static default = 0.0.0.0>

Protocols Used for Integration

- TELNET

Telnet Server

- Used by third party equipment (e.g., touch screen)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Login #1: nwk
- Login #2: nwk2

Quantum® *(continued)*
System Commands
ETHERNET Commands

ETHERNET Command Formats

Operation
|
#ETHERNET, Configuration Number, Parameters
|
Command *Use "ETHERNET Command-specific fields" tables to complete these command fields.*

ETHERNET Command-specific fields

Configuration Numbers:

Description	Configuration Number	Parameters
Set IP Address	0	IP Address (XXX.XXX.XXX.XXX)
Set Gateway Address	1	IP Address (XXX.XXX.XXX.XXX)
Set Subnet Mask	2	IP Address (XXX.XXX.XXX.XXX)
Change Login Info	3	User (1 or 2), Old Login, New Login

Example ETHERNET Commands

Operation	Command String
Execute: #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	*#ETHERNET,0,192.168.250.1*<CR><LF>
Set Gateway Address to 10.2.4.1	*#ETHERNET,1,10.2.4.1*<CR><LF>
Query: ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	*?ETHERNET,0*<CR><LF>
What is the Login Information for user 1?	*?ETHERNET,3,1*<CR><LF>
What is the Login Information for ALL users?	*?ETHERNET,3,0*<CR><LF> (**Note:** 0 = ALL)
Response: ~ETHERNET, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	*~ETHERNET,0,192.168.250.1*<CR><LF>

Quantum® *(continued)*
System Commands *(continued)*
INTEGRATION ID Commands

INTEGRATION ID Command Formats

Operation

?INTEGRATIONID, Action Number, Parameters

Command

Use "INTEGRATIONID Command-specific fields" tables to complete these command fields.

INTEGRATION ID Command-specific fields

Action Numbers and Parameters:

Description	Action Number	Parameters
Get Integration ID for a Serial Number	1	Serial Number: 8 character HEX serial number of the device; Integration ID: The integration ID to be assigned.
Get Info from ID	3	Integration ID = The Integration ID that information is desired for. **Note:** If this field is left blank, all integration IDs will be printed.

Example INTEGRATION ID Commands

Operation	Command String
Execute: ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	*?INTEGRATIONID,1,5678EFEF*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	*~INTEGRATIONID,1,5678EFEF,1*<CR><LF>
Execute: ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	*?INTEGRATIONID,3,1*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	*~INTEGRATIONID,3,1,DEVICE,5678EFEF*<CR><LF>

Quantum® *(continued)*
System Commands *(continued)*
RESET Commands

RESET Command Formats

Operation
|
#RESET, Action Number
| |
Command *Use "RESET Command-specific fields" tables to complete these command fields.*

RESET Command-specific fields

Action Numbers:

Action	Action Number
Restart the device	0
Restore to factory defaults	1

Example RESET Commands

Operation	Command String
Execute: #RESET, Action Number	
Restart the NWK	*#RESET,0*<CR><LF>
Restore NWK to factory defaults	*#RESET,1*<CR><LF>

Quantum® *(continued)*
System Commands *(continued)*
AREA Commands

AREA Command Formats

Operation *Integration ID (example)*

#AREA[1,2], 2, Action Number, Parameters

Command *Use "AREA Command-specific fields" tables to complete these command fields.*

NOTES

1. AREA can be used to control only those areas of a Quantum® system that have been assigned to a particular integration access point. Please refer to the Q-Design™ software (Integration Tab) or Quantum® Integration Report for details of what areas are available for control and monitoring.
2. AREA commands cannot be sent to areas that contain other areas, such as a floor or an entire building.

AREA Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set (#) Area Level	1	Level[1] = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Start Raising[4]	2	None
Start Lowering[4]	3	None
Stop Raising/Lowering	4	None
Set or Get Current Scene	6	Scene Number[5] = 0–32[6]
Set or Get Daylighting Mode	7	1 = Active 2 = Inactive
Get Occupancy State	8	1 = Unknown 2 = Inactive 3 = Occupied 4 = Unoccupied
Set or Get Occupancy Mode	9	1 = Occupancy and Vacancy[7] 2 = Vacancy[7] 3 = Not Applicable[8] 4 = Inactive
Get or Set Occupied Level or Scene	12	Level = 0–100; 200–232 for Scene Number = 0–32
Get or Set Unoccupied Level or Scene	13	Level = 0–100; 200–232 for Scene Number = 0–32
Get or Set Hyperion™ Shadow Sensor Override State[9]	26	0 = Disable 1 = Enable 2 = Mixed (Get Only)
Get or Set Hyperion™ Brightness Sensor Override State[9]	27	0 = Disable 1 = Enable 2 = Mixed (Get Only)

NOTES

1. The Level is accepted as a percentage.
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
4. When a Raise/Lower command is issued, the area's level will continue to go towards high end/low end until a Stop command is received.
5. Scene 0 is the Off Scene.
6. Scenes 17–32 available only on Slider.
7. If After Hours is used in an area, setting the area's Occupancy Mode to "Occupancy and Vacancy" or "Vacancy" will activate After Hours.
8. The area will report "Not Applicable" as its Occupancy Mode if the area does not have occupancy sensors and if After Hours is not used.
9. Quantum® 2.7 and higher.

Quantum® *(continued)*
System Commands *(continued)*
AREA Commands *(continued)*

Example AREA Messages

Operation	Command String
Execute: #AREA, Integration ID, Action Number, Parameters	
Set area level to 75% (Fade = 4 sec, Delay = 2 sec)	*#AREA,2,1,70,4,2*<CR><LF>
Lower Area	*#AREA,2,3*<CR><LF>
Query: ?AREA, Integration ID, Action Number	
Is the area occupied?	*?AREA,2,8*<CR><LF>
What is the current active scene?	*?AREA,2,6*<CR><LF>
Response: ~AREA, Integration ID, Action Number, Parameters	
The area is currently occupied	*~AREA,2,8,3*<CR><LF>
Area Scene 2 is currently active	*~AREA,2,6,2*<CR><LF>

Quantum® *(continued)*
System Commands *(continued)*
SHADEGRP Commands

SHADEGRP Command Formats

Operation — *Integration ID (example)*

#SHADEGRP[1], 2, Action Number, Parameters

Command — *Use "SHADEGRP Command-specific fields" tables to complete these command fields.*

NOTE

1. SHADEGRP can be used to control only those shade groups of a Quantum® system that have been assigned to a particular integration access point. Please refer to the Q-Design™ software (Integration Tab) or Quantum® Integration Report for details of what shade groups are available for control and monitoring.

SHADEGRP Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) Shade Group Level	1	Level[1] = 0–100 or 0.00–100.00 Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Start Raising[4]	2	None
Start Lowering[4]	3	None
Stop Raising/Lowering	4	None
Set or Get Current Preset	6	Preset Number[5] = 0–30

NOTES

1. The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.
2. The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0 seconds. The maximum delay time is 4 hours.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds a value of 1.25 seconds will be used.
4. When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
5. Preset 0 is the Open Preset and Preset 30 is the Closed Preset.

Example SHADEGRP Messages

Operation	Command String
Execute: #SHADEGRP, Integration ID, Action Number, Parameters	
Set shade group to 70% (Delay = 2 sec)	*#SHADEGRP,2,1,70,2*<CR><LF>
Lower shade group.	*#SHADEGRP,2,3*<CR><LF>
Query: ?SHADEGRP, Integration ID, Action Number	
What is the current active preset?	*?SHADEGRP,2,6*<CR><LF>
Response: ~SHADEGRP, Integration ID, Action Number, Parameters	
Shade group Preset 2 is currently active.	*~SHADEGRP,2,6,2*<CR><LF>

Quantum® *(continued)*
System Commands *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT[1], 2, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

NOTE

1. OUTPUT commands can be used to control system lighting zones, contact closed outputs and AC Motor Loads.

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Output Level	1	Level[1] = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Start Raising[4]	2	None
Start Lowering[4]	3	None
Stop Raising/Lowering[4]	4	None
Pulse	6	Pulse[5] time in: SS.ss[3], SS, MM:SS, or HH:MM:SS, or Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Set DMX color/level settings[6]	17	Color/level index: 0–255 0.00–100.00[5]
Motor Jog Raise[6]	18	None[7]
Motor Jog Lower[6]	19	None[7]
Motor 4-Stage Jog Raise[6]	20	None[7]
Motor 4-Stage Jog Lower[6]	21	None[7]

NOTES

1. The Level is taken as a percentage.
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
4. When a Raise/Lower command is issued, the output's level will continue to go towards high end/low end until a Stop command is received.
5. The default time is one second.
6. Not supported in RadioRA® 2.
7. Quantum® 2.5 and up.

Quantum® *(continued)*
System Commands *(continued)*
OUTPUT Commands *(continued)*

Example OUTPUT Messages

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set output level to 70% (Fade = 4 sec, Delay = 2 sec)	*#OUTPUT,2,1,70,4,2*<CR><LF>
Raise Output	*#OUTPUT,2,2*<CR><LF>
Query: ?OUTPUT, Integration ID	
What is the current output level?	*?OUTPUT,2*<CR><LF>
Response: ~OUTPUT, Integration ID, Action Number, Parameters [1]	
Output level is set to 48%.	*~OUTPUT,2,1,48*<CR><LF>

NOTE

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.

Quantum® *(continued)*
System Commands *(continued)*
SYSVAR Commands [1]

SYSVAR Command Formats

Operation
|
#SYSVAR,2,Action Number, Parameters
|
Command *Use "SYSVAR Command-specific fields" tables to complete these command fields.*

NOTE

1. SYSVAR Commands available only on Quantum® version 2.5 or higher.

SYSVAR Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set (#) or Get (?) the state of a given variable	1	State number

Example SYSVAR Messages

Operation	Command String
Execute: #SYSVAR, Integration ID, Action Number, Parameters	
Set the variable state to the third state	*#SYSVAR,2,1,3*<CR><LF>
Query: ?SYSVAR, Integration ID, Action Number	
What is the state of the variable?	*?SYSVAR,2,1*<CR><LF>
Response: ~SYSVAR, Integration ID, Action Number, Parameters	
The variable is in the third state.	*~SYSVAR,2,1,3*<CR><LF>

HomeWorks® QS
System Overview

HomeWorks® QS is Lutron's premier total home control system. It allows control and monitoring of lights, shades, HVAC, sensors and appliances. The HomeWorks® QS system includes QS devices, RF devices and power panels that provide solutions for new construction and retrofit projects of any size.

HomeWorks® QS (HomeWorks® QS) System Device Compatibility Index:

	HomeWorks QS®
HomeWorks® QS RF and Wired seeTouch® Keypad	✓
Sivoia® QS and RF Shade	✓
HomeWorks® QS RF and Wired Maestro® Control	✓
HomeWorks® QS Hybrid Keypad	✓
HomeWorks® QS Dynamic Keypad	✓
HomeWorks® QS Tabletop seeTouch® Keypad	✓
HVAC Controller	✓
HomeWorks® QS Plug-in Module	✓
HomeWorks® QS Visor Control Receiver	✓
QS Input/Output Interface	✓
HomeWorks® QS Wallbox Power Module	✓
GRAFIK Eye® QS	✓
Pico® Wireless Control	✓
Radio Powr Savr™ Sensor	✓
Remote Power Module	✓
Adaptive Power Module (Int'l)	✓
EcoSystem® Adaptive Power Module (Int'l)	✓
DALI® Power Module (Int'l)	✓
0–10 V/Softswitch® Power Module (Int'l)	✓
Motor Module (Int'l)	✓

HomeWorks® QS *(continued)*
System Overview *(continued)*

Command Types

The following is a list of supported command types. Details on certain device-specific types (e.g., DEVICE, HVAC) are located in the individual device section of this manual.

Operation characters will be followed by command types.

- **DEVICE** allows control and monitoring of device inputs such as button presses and contact closure inputs
- **OUTPUT** allows control and monitoring of device outputs such as dimmers and contact closure outputs
- **SHADEGRP** allows control of shades in the HomeWorks® QS system. Shade groups are collections of shades that operate in unison
- **MONITORING** specifies the type of messages that the system will report
- **HVAC** allows control and monitoring of Lutron® HVAC equipment
- **TIMECLOCK** allows control (enable/disable) and monitoring of system timeclocks
- **SYSVAR** allows control and monitoring of system variables
- **AREA** allows control and monitoring of an area (e.g., activating area Scenes, monitoring occupancy)
- **ERROR** displays responses to invalid commands
- **HELP** displays usage information for the supported commands and their corresponding actions
- **SYSTEM** allows setting and controlling system parameters and variables
- **ETHERNET** modifies the Ethernet configuration of the HomeWorks® QS processor
- **INTEGRATIONID** gets information of the integration id or serial number of a device
- **RESET** resets the HomeWorks® QS processor

HomeWorks® QS *(continued)*
Integration Access Points
HomeWorks® QS Processor

Model: HQP6-2

Why Integrate with a HomeWorks® QS Processor?

- Integrating with a HomeWorks® QS Processor provides integration over Ethernet without the need for additional equipment or interfaces.
- RS-232 integration can also be accomplished using third party Ethernet to RS-232 adapters.
- Integrating directly with the HomeWorks® QS Processor also provides the greatest bandwidth port into the HomeWorks® QS system.
- Integration IDs are automatically generated by the HomeWorks® QS software application (e.g., for devices, outputs, shadegroups, timeclocks). Integration IDs can be removed to reduce processing and traffic of unwanted messages.
- Phantom Keypads allow for integration functionality to be organized on various virtual keypads that have unlimited buttons and do not count towards link device count limits.

Integration Capabilities

- Control and monitoring of output devices such as dimmers, the GRAFIK Eye®, shades and contact closure outputs
- Control and monitoring of physical or phantom keypad buttons and button status LEDs
- Control and monitoring of Lutron® HVAC equipment
- Control and monitoring of individual timeclocks
- Control and monitoring of state variables
- Monitoring of occupancy sensors
- Control and monitoring of areas to activate scenes and monitor occupancy

HomeWorks® QS *(continued)*
Integration Access Points *(continued)*

Connection Information

Ethernet

Configuring the HomeWorks® QS processor to communicate over a network takes not only knowledge of the HomeWorks® QS system, but of networking as well. Installers with limited networking knowledge are advised to contact a networking professional before attempting to connect a HomeWorks® QS processor through a network.

The installer will make any necessary configuration changes to the HomeWorks® QS processor using the HomeWorks® QS Design Software Application and the network professional can make any necessary changes to the networking equipment.

Dual Ethernet Port

- IEEE® 802.3 Auto-Sensing 10BaseT/100BaseTX
- Supports MDI/MDIX auto-crossover (no crossover cable needed).
- Female 8P8C “Computer RJ-45” socket
- Green “Connect” LED, Amber “Activity” LED
- Use Cat 5 cabling or better
- 2 Port 10/100 Ethernet Switch

TCP/IP Settings

- IP Address: Address at which the processor can be reached for integration. In most instances when integrating to a processor, DHCP should be disabled and a static IP address should be assigned to prevent the processor from changing IP addresses.
- Subnet Mask: In conjunction with the IP address, it defines the subnet on which the processor communicates. Processors will be able to integrate only with devices on the same subnet.
- Gateway: Used in instances where the processor needs to communicate to the internet. Should be set to the IP address of the device on the network connected directly to the internet—typically, the home router.

Protocols Used for Integration

- TELNET

Telnet Server

- Used by third party equipment (e.g., touch screen)
- Used by Lutron® mobile devices (e.g., *iPad* and *iPhone*)
- Limited to transferring ASCII characters
- Telnet Port number is 23
- Logins: Defined in the HomeWorks® QS software application

RS232

The HomeWorks® QS Processor does not have native support for RS232. An Ethernet to RS232 adapter can be used and configured to provide RS232 integration directly from the Processor if needed.

iPhone and iPad are trademarks of Apple, Inc., registered in the U.S. and other countries.

HomeWorks® QS *(continued)*
System Commands
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT[1], 2, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

NOTE

1. OUTPUT commands can be used to control system lighting zones, individual shades, and contact closed outputs.

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set (#) or Get (?) Output Level	1	Level[1] = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Start Raising[4]	2	None
Start Lowering[4]	3	None
Stop Raising/Lowering[4]	4	None
Flash (#) or Get (?) Flash Frequency	5	Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Set Pulse CCO (#)	6	Pulse[5] time in: SS.ss[3], SS, MM:SS, or HH:MM:SS, or Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Set (#) Venetian Shade Tilt to a specified level	9	Tilt level in % = 0.00–100[6] Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Set (#) Venetian Shade Tilt and Lift to a specified level	10	Lift[1] = 0–100 or 0.00–100.00 Tilt[1] = 0–100[6] or 0.00–100.00[6] Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Raise (#) Tilt Output Level	11	None
Lower (#) Tilt Output Level	12	None
Stop (#) Raise/Lower Tilt Output Level	13	None
Raise(#) Lift Output Level	14	None
Lower(#) Lift Output Level	15	None
Stop (#) Raise/Lower Lift Output Level	16	None
Get Horizontal Sheer Shade Region	28	Regions: 0 = Lift, 1 = Tilt

NOTES

1. The Level/Lift/Tilt is taken as a percentage.
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
4. When a Raise/Lower command is issued, the output's level will continue to go towards high end/low end until a Stop command is received.
5. The default time is one second.
6. 50 for Horizontal Sheer Blinds.

HomeWorks® QS *(continued)*
System Commands *(continued)*
OUTPUT Commands *(continued)*

Example OUTPUT Messages

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set output level to 70% (Fade = 4 sec, Delay = 2 sec)	*#OUTPUT,2,1,70,4,2*<CR><LF>
Raise Output	*#OUTPUT,2,2*<CR><LF>
Query: ?OUTPUT, Integration ID	
What is the current output level?	*?OUTPUT,2*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 48%.	*~OUTPUT,2,1,48*<CR><LF>

NOTE

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.

HomeWorks® QS *(continued)*
System Commands *(continued)*
SHADEGRP Commands

SHADEGRP Command Formats

Operation *Integration ID (example)*

#SHADEGRP, 2, Action Number, Parameters

Command *Use "SHADEGRP Command-specific fields" tables to complete these command fields.*

SHADEGRP Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Shade Group Level	1	Level[1] = 0–100 or 0.00–100.00 Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Start Raising[3]	2	None
Start Lowering[3]	3	None
Stop Raising/Lowering	4	None
Set (#) or Get (?) Current Preset	6	Preset Number[4] = 0–30
Set (#) Venetian Tilt	14	Level[5] = 0–100[6] or 0.00–100.00[6] Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Set (#) Lift and Tilt for venetians	15	Lift[5] = 0–100 or 0.00–100.00 Tilt[5] = 0–100[6] or 0.00–100.00[6] Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Raise Venetian Tilt[3]	16	None
Lower Venetian Tilt[3]	17	None
Stop Venetian Tilt[3]	18	None
Raise Venetian Lift[3]	19	None
Lower Venetian Lift[3]	20	None
Stop Venetian Lift[3]	21	None
Get Horizontal Sheer Shade Region	28	Lift = 0 Tilt = 1

NOTES

1. The Fade and Delay time are optional. For shades, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay. When not used, the system will use a zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
3. When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
4. Preset 0 is the Open Preset and Preset 30 is the Closed Preset.
5. The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.
6. 50 for Horizontal Sheer Blinds.

HomeWorks® QS *(continued)*
System Commands *(continued)*
SHADEGRP Commands *(continued)*

Example SHADEGRP Messages

Operation	Command String
Execute: #SHADEGRP, Integration ID, Action Number, Parameters	
Set shade group to 70% (Delay = 2 sec).	*#SHADEGRP,2,1,70,2*<CR><LF>
Lower shade group.	*#SHADEGRP,2,3*<CR><LF>
Query: ?SHADEGRP, Integration ID, Action Number	
What is the current active preset?	*?SHADEGRP,2,6*<CR><LF>
Response: ~SHADEGRP, Integration ID, Action Number, Parameters	
Shade group Preset 2 is currently active.	*~SHADEGRP,2,6,2*<CR><LF>

HomeWorks® QS *(continued)*
System Commands *(continued)*
TIMECLOCK Commands

TIMECLOCK Command Formats

Operation

#TIMECLOCK,2,Action Number, Parameters

Command

Use "TIMECLOCK Command-specific fields" tables to complete these command fields.

TIMECLOCK Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Get (?) Sunrise Time	2	None
Get (?) Sunset Time	3	None
Get (?) Day's Schedule	4	None
Execute (#) event	5	Index of the event to test. The index number of the first event is 1; the second event is 2, and so on.
Enable/Disable Event	6	Event Index, Enable State (1 = Enable, 2 = Disable)

Example TIMECLOCK Messages

Operation	Command String
Execute: #TIMECLOCK, Integration ID, Action Number, Parameters	
Execute the 3rd event of the timeclock.	*#TIMECLOCK,2,5,3*<CR><LF>
Query: ?TIMECLOCK, Integration ID, Action Number	
What is the sunrise time?	*?TIMECLOCK,2,2*<CR><LF>
Response: ~TIMECLOCK, Integration ID, Action Number, Parameters	
The time the sun rises.	*~TIMECLOCK,2,2,05:32*<CR><LF>

HomeWorks® QS *(continued)*
System Commands *(continued)*
SYSVAR Commands

SYSVAR Command Formats

Operation
|
#SYSVAR,2,Action Number, Parameters
|
Command *Use "SYSVAR Command-specific fields" tables to complete these command fields.*

SYSVAR Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set (#) or Get (?) the state of a given variable	1	State number

Example SYSVAR Messages

Operation	Command String
Execute: #SYSVAR, Integration ID, Action Number, Parameters	
Set the variable state to the third state.	*#SYSVAR,2,1,3*<CR><LF>
Query: ?SYSVAR, Integration ID, Action Number	
What is the state of the variable?	*?SYSVAR,2,1*<CR><LF>
Response: ~SYSVAR, Integration ID, Action Number, Parameters	
The variable is in the third state.	*~SYSVAR,2,1,3*<CR><LF>

HomeWorks® QS *(continued)*
System Commands *(continued)*
AREA Commands

AREA Command Formats

Operation *Integration ID (example)*

#AREA[1], 2, Action Number, Parameters

Command *Use "AREA Command-specific fields" tables to complete these command fields.*

NOTE

1. AREA commands cannot be sent to areas that contain other areas, such as a floor or an entire building.

AREA Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Get (?) Occupancy State	8	3 = Occupied 4 = Unoccupied

Example AREA Messages

Operation	Command String
Execute: #AREA, Integration ID, Action Number, Parameters	
Set area level to 75% (Fade = 4 sec, Delay = 2 sec)	*#AREA,2,1,70,4,2*<CR><LF>
Lower Area.	*#AREA,2,3*<CR><LF>
Query: ?AREA, Integration ID, Action Number	
Is the area occupied?	*?AREA,2,8*<CR><LF>
What is the current active scene?	*?AREA,2,6*<CR><LF>
Response: ~AREA, Integration ID, Action Number, Parameters	
The area is currently occupied.	*~AREA,2,8,3*<CR><LF>
Area Scene 2 is currently active.	*~AREA,2,6,2*<CR><LF>

HomeWorks® QS *(continued)*
System Commands *(continued)*
ETHERNET Commands

ETHERNET Command Formats

Operation
|
#ETHERNET, Configuration Number, Parameters
|
Command *Use "ETHERNET Command-specific fields" tables to complete these command fields.*

ETHERNET Command-specific fields

Configuration Number and Parameters:

Description	Configuration Number	Parameters
Get (?) or Set(#) IP Address	0	IP Address (XXX.XXX.XXX.XXX)
Get (?) or Set (#) Gateway Address	1	IP Address (XXX.XXX.XXX.XXX)
Get (?) or Set (#) Subnet Mask	2	IP Address (XXX.XXX.XXX.XXX)
Get (?) DHCP	4	None
Get (?) or Set (#) Multicast Address	5	IP Address (XXX.XXX.XXX.XXX)

Example ETHERNET Commands

Operation	Command String
Execute: #ETHERNET, Configuration Number, Parameters	
Set IP Address to 192.168.250.1	*#ETHERNET,0,192.168.250.1*<CR><LF>
Set Gateway Address to 10.2.4.1	*#ETHERNET,1,10.2.4.1*<CR><LF>
Query: ?ETHERNET, Configuration Number, Parameters	
What is the IP Address?	*?ETHERNET,0*<CR><LF>
Response: ~DEVICE, Integration ID, Configuration Number, Parameters	
The IP Address is 192.168.250.1	*~ETHERNET,0=,192.168.250.1*<CR><LF>

HomeWorks® QS *(continued)*
System Commands *(continued)*
INTEGRATION ID Commands

INTEGRATION ID Command Formats

Operation

#INTEGRATIONID, Action Number, Parameters

Command *Use "INTEGRATIONID Command-specific fields" tables to complete these command fields.*

INTEGRATION ID Command-specific fields

Action Numbers and **Parameters:**

Description	Action Number	Parameters
Get (?) Integration ID for a Serial Number	1	Serial Number = 8 character HEX serial number of the device Integration ID = The integration ID to be assigned.
Get (?) Info from ID	3	Integration ID **Note:** If this field is left blank, all integration IDs will be printed.

Example INTEGRATION ID Commands

Operation	Command String
Query: ?INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	*?INTEGRATIONID,1,5678EFEF*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Get the Integration ID for a serial number	*~INTEGRATIONID,1,5678EFEF,1*<CR><LF>
Query: ?INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	*?INTEGRATIONID,3,1*<CR><LF>
Response: ~INTEGRATIONID, Action Number, Parameters	
Get information about an Integration ID command	*~INTEGRATIONID,3,1,DEVICE,5678EFEF*<CR><LF>

HomeWorks® QS *(continued)*
System Commands *(continued)*
RESET Commands

RESET Command Formats

Operation
|
#RESET, Action Number
|
Command *Use "RESET Command-specific fields" tables to complete these command fields.*

RESET Command-specific fields

Action Numbers:

Action	Action Number
Resets the HomeWorks® QS processor	0

Example RESET Commands

Operation	Command String
Execute: #RESET, Action Number	
Reset the HomeWorks® QS processor	*#RESET,0*<CR><LF>

GRAFIK Eye® QS
Main Unit

Models: QSGR-, QSGRJ-, QSGRK-, QSGRM-, QSGRN-, QSGRQ-

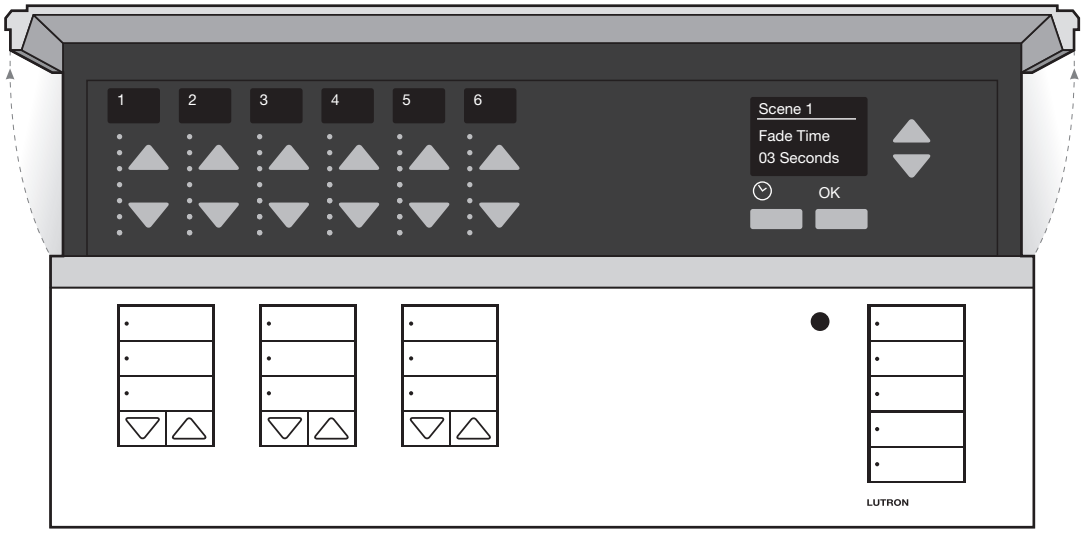

Why Integrate with a GRAFIK Eye® QS?

- Control individual lights and scenes
- Query current scene and light levels
- Control LEDs of unprogrammed buttons

Integration Capabilities

- 16 scenes and up to 24 controllable outputs (output count depends on model)

Supported Command Types

- **DEVICE** allows control and monitoring of buttons, LEDs and scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
GRAFIK Eye® QS Main Unit	✓	✓	✓	✓	



GRAFIK Eye® QS *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Zone 1 Controller– Zone 24 Controller	1–24	Raise, Lower, Stop, Set Light Level
Scene 1 Button	70	Press, Release (Scenes Activate on "Press")
Scene 2 Button	71	Press, Release (Scenes Activate on "Press")
Scene 3 Button	76	Press, Release (Scenes Activate on "Press")
Scene 4 Button	77	Press, Release (Scenes Activate on "Press")
Scene Off Button	83	Press, Release
Shade Column 1 Open	38	Press, Release (Shades React on "Release")
Shade Column 1 Preset 1	39	Press, Release (Shades React on "Release")
Shade Column 1 Close	40	Press, Release (Shades React on "Release")
Shade Column 1 Lower	41	Press, Release (Shades React on "Release")
Shade Column 1 Raise	47	Press, Release (Shades React on "Release")
Shade Column 2 Open	44	Press, Release (Shades React on "Release")
Shade Column 2 Preset 1	45	Press, Release (Shades React on "Release")
Shade Column 2 Close	46	Press, Release (Shades React on "Release")
Shade Column 2 Lower	52	Press, Release (Shades React on "Release")
Shade Column 2 Raise	53	Press, Release (Shades React on "Release")
Shade Column 3 Open	50	Press, Release (Shades React on "Release")
Shade Column 3 Preset 1	51	Press, Release (Shades React on "Release")
Shade Column 3 Close	56	Press, Release (Shades React on "Release")
Shade Column 3 Lower	57	Press, Release (Shades React on "Release")
Shade Column 3 Raise	58	Press, Release (Shades React on "Release")
Scene Controller	141	Set Current Scene, Set Zone Lock, Set Scene Lock, Set Sequence State, Raise, Lower, Stop, Scene Save
Scene 1 LED[1]	201	Get (?) LED state
Scene 2 LED[1]	210	Get (?) LED state
Scene 3 LED[1]	219	Get (?) LED state
Scene 4 LED[1]	228	Get (?) LED state
Scene Off LED[1]	237	Get (?) LED state
Local CCI	163	Report (~) Occupied, Report (~) Unoccupied
Timeclock Controller	166	Enable/Disable, Query Status
Wireless Occupancy Sensor 1–30	500–529	Report (~) Occupied, Report (~) Unoccupied
EcoSystem® Ballast Occupancy Sensor 1–64	700–763	Report (~) Occupied, Report (~) Unoccupied

NOTE

1. Not supported in QS Standalone.

Continued on next page…



GRAFIK Eye® QS *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Component Numbers *(continued)*:

Component	Component Number	Available Actions
Shade Column 1 Open LED[1]	174	Get (?) LED state
Shade Column 1 Preset 1 LED[1]	175	Get (?) LED state
Shade Column 1 Close LED[1]	211	Get (?) LED state
Shade Column 2 Open LED[1]	183	Get (?) LED state
Shade Column 2 Preset 1 LED[1]	184	Get (?) LED state
Shade Column 2 Close LED[1]	220	Get (?) LED state
Shade Column 3 Open LED[1]	192	Get (?) LED state
Shade Column 3 Preset 1 LED[1]	193	Get (?) LED state
Shade Column 3 Close LED[1]	229	Get (?) LED state

NOTE

1. Not supported in QS Standalone.

Action Numbers and Parameters:

Action	Action Number	Parameters
Press/Occupied	3	None
Release/Unoccupied	4	None
Set Current Scene[1,2]	7	Scene
Set (#) or Get (?) LED State[3]	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second[2] 3 = Rapid-Flash: 10 flashes every second[2]
Scene Save	12	Scene
Get/Set Light Level[4,5]	14	Level = 0–100 or 0.00–100.00 Fade[6] in: SS.ss[7], SS, MM:SS, or HH:MM:SSJ79 (QS Standalone fade: maximum 4 hours) Delay[6] in: SS.ss[7], SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Set Zone Lock[8]	15	0 = Off; 1 = On
Set Scene Lock[8]	16	0 = Off; 1 = On
Set Sequence State[8]	17	0 = Off 1 = Sequence through Scenes 1–4 2 = Sequence through Scenes 5–16
Start Raising[4,5]	18	None
Start Lowering[4,5]	19	None
Stop Raising/Lowering[4,5]	20	None
Get/Set Timeclock State	34	0 = Disabled 1 = Enabled

NOTES

The number of zone controllers available matches the number of zones a particular model supports.

1. Not supported in HomeWorks® QS.
2. Not supported in RadioRA® 2.
3. Quantum® or HomeWorks® only. “Set” is for unprogrammed buttons and buttons with LED logic ‘Defined by Integration.’
4. Use OUTPUT command with equivalent command in RadioRA® 2.
5. Use OUTPUT command with equivalent command in HomeWorks® QS.
6. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
7. Fractional seconds “SS.ss” will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.
8. QS Standalone only.



GRAFIK Eye® QS *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation — *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command — *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level = 0–100 or 0.00–100.00 Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 4 hours) Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

NOTES

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter sec. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

Example OUTPUT Commands

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	*#OUTPUT,1,1,75,01:30*<CR><LF>
Start Raising zone level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering zone level.	*#OUTPUT,1,4*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTE

1. The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels. Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending *#OUTPUT,1,1,100,* the response from the system will be *~OUTPUT,1,1,100.00*

Energi Savr Node™ QS for DALI®

QS Model: QSNE-2DAL-D
HomeWorks® QS Model: LQSNE-2DAL-D

QSNE-2DAL-D

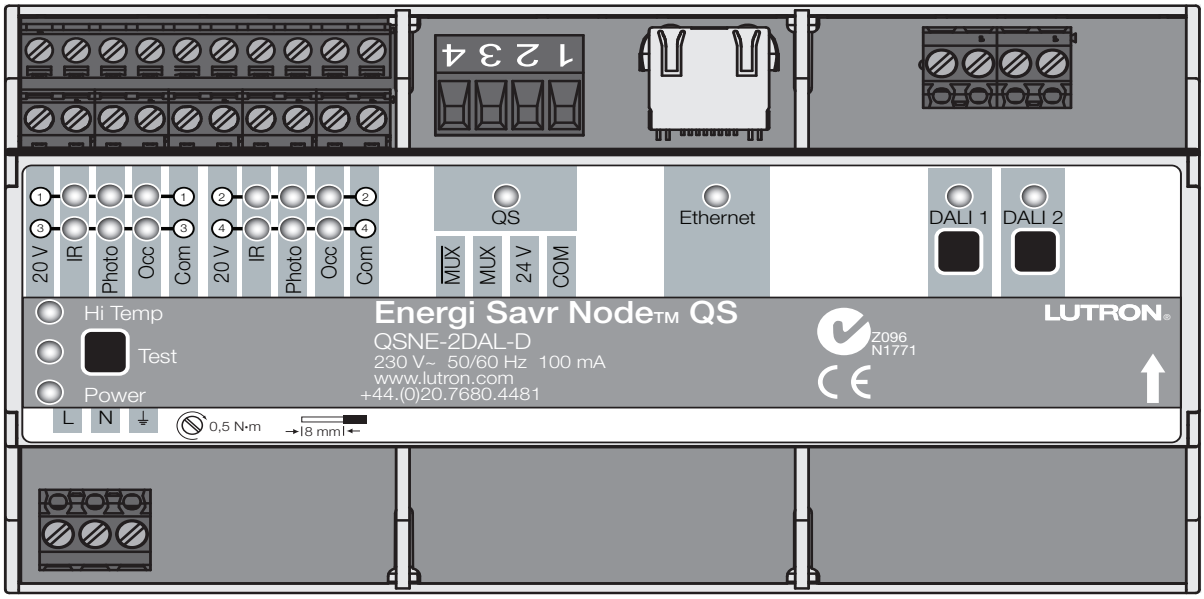

Why Integrate with an Energi Savr Node™ (ESN)?

- Control individual zones and scenes in an area
- Query current scene and light levels

Integration Capabilities

- Up to 32 areas with 16 scenes per area. Up to 32 zones across the two DALI® buses

Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
ESN QS for DALI®	✓	✓		✓	

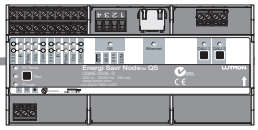

Energi Savr Node™ QS for DALI® *(continued)*
DEVICE Commands[5]

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Zone 1–Zone 32[1,2,3]	301–332	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 32[1,3]	401–432	Set or Get Scene, Set Light Level, Raise, Lower, Stop
Occupancy Sensors 1–4	151–154	Report (~) Occupied Report (~) Unoccupied

NOTES

1. Zones and areas are created and configured using the Lutron® ESN Configuration Tool on an *iPhone* or *iPod Touch* mobile device, the Quantum® Q-Design™ Tool, or the HomeWorks® QS Lutron® Designer. Only those areas and zones which have been configured using one of these tools are accessible through integration.
2. Assigned zones can be given an individual Integration ID and controlled using the *#OUTPUT* command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
3. When the ESN is part of a Quantum® system, then the *#AREA* and *#OUTPUT* commands found in the Quantum® "System Commands" section of this integration document should be used.

Action Numbers and Parameters:

Action	Action Number	Parameters
Report (~) Occupied	3	None
Report (~) Unoccupied	4	None
Set or Get Current Scene	7	Scene
Scene Save	12	Scene[1]
Set or Get Light Level	14	Level = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 90 seconds) Delay[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Set Scene Lock[4]	16	0 = Off; 1 = On
Set Sequence State[4]	17	0 = Off; 1 = Sequence through Scenes 1–4; 2 = Sequence through Scenes 5–16
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

NOTES

1. Available only with Energi Savr Node™ firmware >6.x.
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.
4. QS Standalone only.
5. Not supported in HomeWorks® QS.

iPhone and iPod Touch are trademarks of Apple, Inc., registered in the U.S. and other countries.

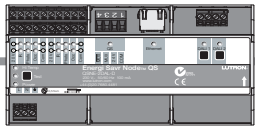

Energi Savr Node™ QS for DALI® *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Level	1	Level = 0–100 or 0.00–100.00 Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 90 seconds) Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

NOTES

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

Example OUTPUT Commands

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	*#OUTPUT,1,1,75,01:30*<CR><LF>
Start Raising zone level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering zone level.	*#OUTPUT,1,4*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTE

1. The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels. Example: If the "Over Sink" (Integration ID -1) dimmer is at 20% and is then commanded to go to 100% by sending *#OUTPUT,1,1,100* the response from the system will be *~OUTPUT,1,1,100.00*

Energi Savr Node™ QS with EcoSystem®

Model: QSN-2ECO-S

Energi Savr Node™ QS with EcoSystem® (International)

QS Model: QSNE-2ECO-D
HomeWorks® QS Model: LQSE-2ECO-D

QSNE-2ECO-D

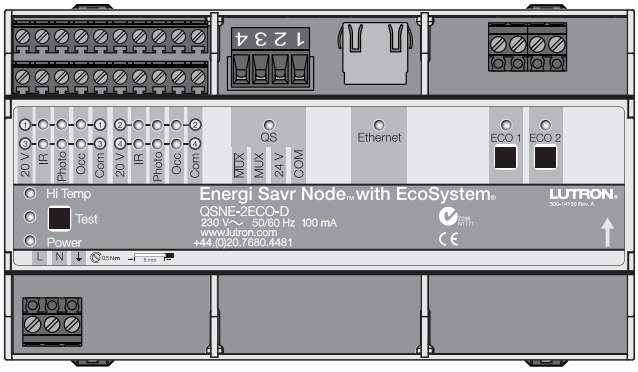

QSN-2ECO-S

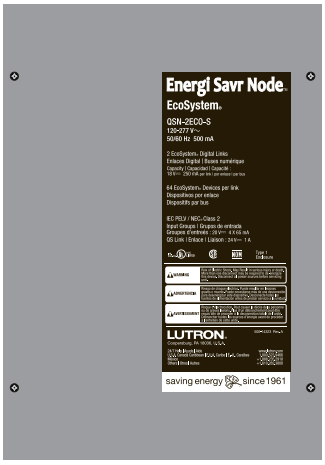

Why Integrate with an Energi Savr Node™?

- Control individual zones and scenes in an area
- Query current scene and light levels

Integration Capabilities

- Up to 100 areas with 16 scenes per area. Up to 100 zones across the two EcoSystem® loops

Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
ESN QS with Ecosystem® (Int'l)	✓	✓		✓	
ESN with EcoSystem®	✓	✓			

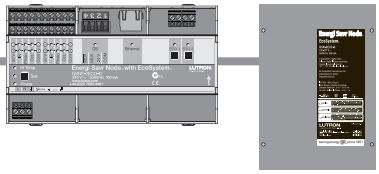

Energi Savr Node™ QS with EcoSystem® *(continued)*
DEVICE Commands [1]

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

NOTE

1. Not Supported in HomeWorks® QS.

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Occupancy Sensors 1–4	136–139	Report (~) Occupied, Report (~) Unoccupied
Loop 1 Ballast Occupancy Sensors	140–203	Report (~) Occupied, Report (~) Unoccupied
Loop 2 Ballast Occupancy Sensors	204–267	Report (~) Occupied, Report (~) Unoccupied
Zone 1–Zone 100 [1,2,3]	1001–1100	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 100 [1,3]	1201–1300	Set or Get Scene, Set Light Level, Raise, Lower, Stop

NOTES

1. Zones and areas are created and configured using the Lutron® ESN Configuration Tool on an *iPhone* or *iPod Touch* mobile device, the Quantum® Q-Design™ Tool, or the HomeWorks® QS Lutron® Designer. Only those areas and zones which have been configured using one of these tools are accessible through integration.
2. Assigned zones can be given an individual Integration ID and controlled using the *#OUTPUT* command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
3. When the ESN is part of a Quantum® or HomeWorks® QS system, then the *#AREA* and *#OUTPUT* commands found in the Quantum® "System Commands" section of this integration document should be used.

Action Numbers and Parameters:

Action	Action Number	Parameters
Report (~) Occupied	3	None
Report (~) Unoccupied	4	None
Set or Get Current Scene	7	Scene
Scene Save	12	Scene [1]
Set or Get Light Level	14	Level = 0–100 or 0.00–100.00 Fade [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS Delay [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS
Set Scene Lock [4]	16	0 = Off; 1 = On
Set Sequence State [4]	17	0 = Off; 1 = Sequence through Scenes 1–4; 2 = Sequence through Scenes 5–16
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

NOTES

1. Available only with Energi Savr Node™ Firmware >6.x.
2. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.
4. QS Standalone only.

iPhone and iPod Touch are trademarks of Apple, Inc., registered in the U.S. and other countries.

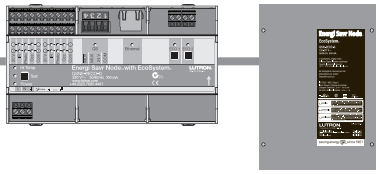

Energi Savr Node™ QS with EcoSystem® *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level = 0–100 or 0.00–100.00 Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 2 hours) Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

NOTES

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

Example OUTPUT Commands

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	*#OUTPUT,1,1,75,01:30*<CR><LF>
Start Raising zone level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering zone level.	*#OUTPUT,1,4*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTE

1. The system will report the target level of a dimmer while it is fading from one level to another.
The actual level is not transmitted while dimming between levels.
Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending *#OUTPUT,1,1,100* the response from the system will be *~OUTPUT,1,1,100.00*

Energi Savr Node™ QS for 0–10 V/Softswitch® (International)

QS Models (QSNE-): 4T10-D, 4S10-D
HomeWorks® QS Models (LQSE-): 4T10-D, 4S10-D

Energi Savr Node™ QS for Phase Adaptive (International)

QS Model: QSNE-4A-D
HomeWorks® QS Model: LQSE-4A-D

Energi Savr Node™ QS for 0–10 V/Softswitch®

Models (QSN-): 4T16-S, 4S16-S

QSN-4T16-S

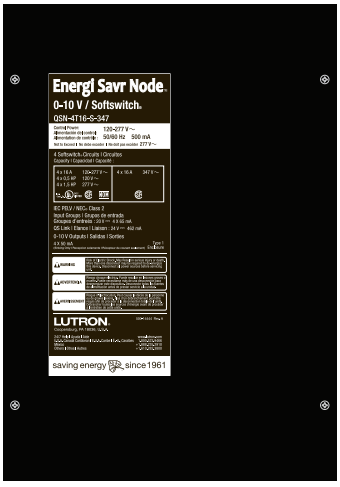

QSNE-4T10-D

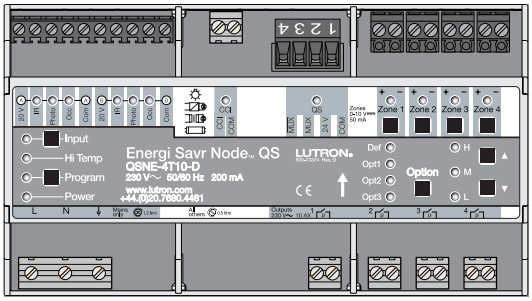

QSNE-4A-D

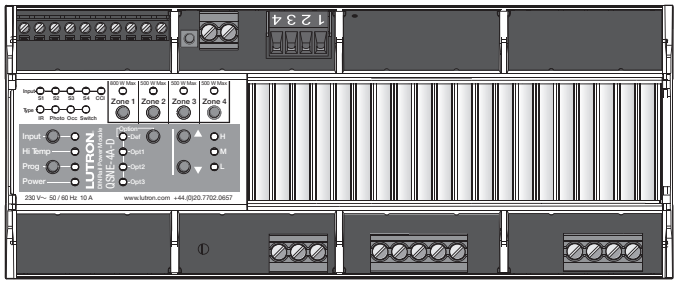

Why Integrate with an Energi Savr Node™?

- Control individual zones and scenes in an area
- Query current scene and light levels

Integration Capabilities

- Four areas with 16 scenes per area. Four zones on four independent outputs

Supported Command Types

- **DEVICE** allows control and monitoring of zone levels and area scenes
- **OUTPUT** allows control and monitoring of the dimmer device output

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
ESN 0–10 V/Softswitch® (Int'l)	✓	✓		✓	
ESN QS Phase Adaptive (Int'l)	✓	✓		✓	
ESN 0–10/Softswitch®	✓	✓			

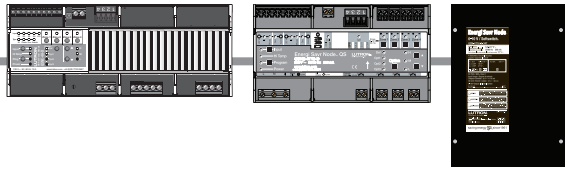

Energi Savr Node™ QS 0–10 V/Softswitch®/Phase Adaptive *(continued)*

DEVICE Commands [1]

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

NOTE

1. Not Supported in HomeWorks® QS.

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Zone 1–Zone 4 [1,2,3]	5–8	Set or Get Light Level, Raise, Lower, Stop
Area 1–Area 4 [1,3]	10–13	Set or Get Scene, Set Light Level, Raise, Lower, Stop
Occupancy Sensor 1–4	34–37	Report (~) Occupied, Report (~) Unoccupied
Occupancy Sensor 1–2	34–35	Report (~) Occupied, Report (~) Unoccupied

NOTES

1. Zones and areas are created and configured using the Lutron® ESN Configuration Tool on an *iPhone* or *iPod Touch* mobile device, the Quantum® Q-Design™ Tool, or the HomeWorks® QS Lutron® Designer. Only those areas and zones which have been configured using one of these tools are accessible through integration.
2. Assigned zones can be given an individual Integration ID and controlled using the *#OUTPUT* command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the ESN.
3. When the ESN is part of a Quantum® or HomeWorks® system, then the *#AREA* and *#OUTPUT* commands found in the Quantum® "System Commands" section of this integration document should be used.

Action Numbers and Parameters:

Action	Action Number	Parameters
Report (~) Occupied	3	None
Report (~) Unoccupied	4	None
Set or Get Current Scene [1]	7	Scene
Scene Save	12	Scene [2]
Set or Get Light Level	14	Level = 0–100 or 0.00–100.00 Fade [3] in: SS.ss [4], SS, MM:SS, or HH:MM:SS Delay [3] in: SS.ss [4], SS, MM:SS, or HH:MM:SS
Set Scene Lock [1]	16	0 = Off; 1 = On
Set Sequence State [1]	17	0 = Off; 1 = Sequence through Scenes 1–4; 2 = Sequence through Scenes 5–16
Start Raising	18	None
Start Lowering	19	None
Stop Raising/Lowering	20	None

NOTES

1. QS Standalone only.
2. Available only with Energi Savr Node™ Firmware > 6.x.
3. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
4. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.

iPhone and iPod Touch are trademarks of Apple, Inc., registered in the U.S. and other countries.

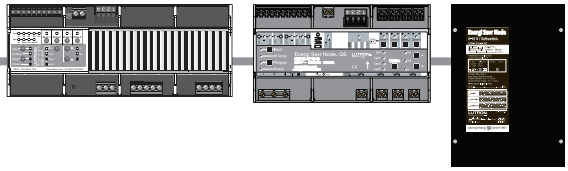

Energi Savr Node™ QS 0–10 V/Softswitch®/Phase Adaptive *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Level	1	Level = 0–100 or 0.00–100.00 Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone fade: maximum 4 hours) Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS (QS Standalone delay: maximum 4 hours)
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

NOTES

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.

Example OUTPUT Commands

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	*#OUTPUT,1,1,75,01:30*<CR><LF>
Start Raising zone level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering zone level.	*#OUTPUT,1,4*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTE

1. The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.
Example: If the "Over Sink" (Integration ID-1) dimmer is at 20% and is then commanded to go to 100% by sending *#OUTPUT,1,1,100* the response from the system will be *~OUTPUT,1,1,100.00*

Energi Savr Node™ QS for Motor Module (International)

QS Model: QSE-CI-4M-D
HomeWorks® QS Model: LQSE-4M-D

LQSE-CI-4M-D

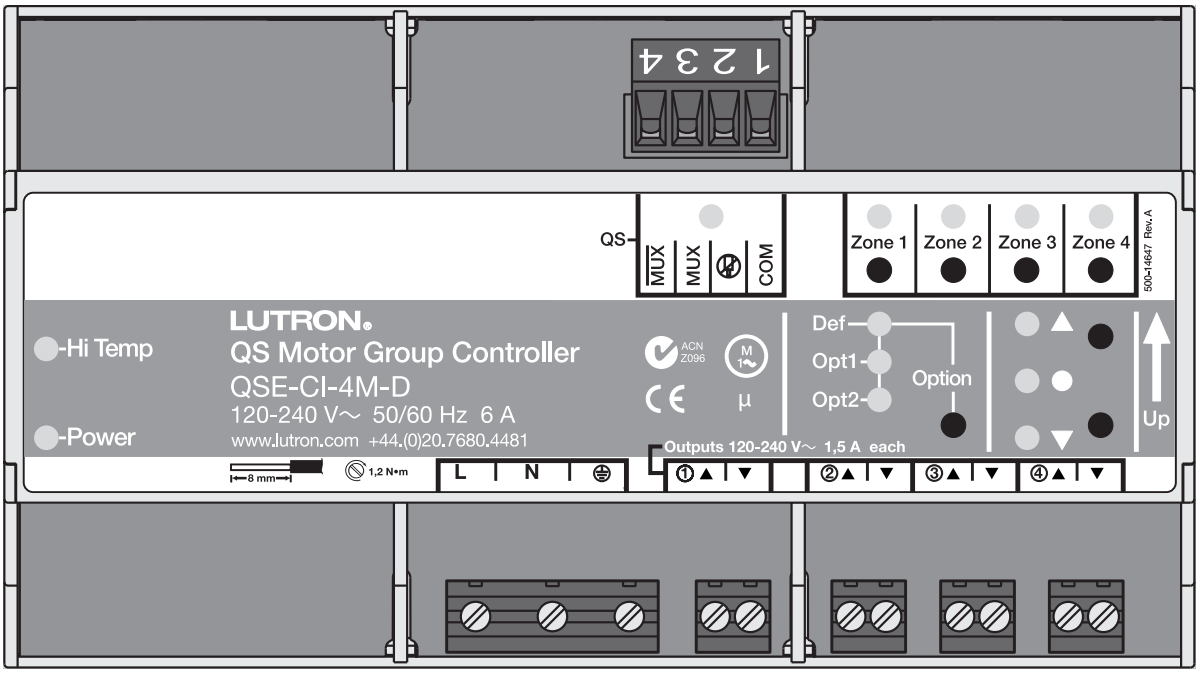

Why Integrate with an Energi Savr Node™?

- Allows control and monitoring of the direction and remaining travel time of the four high-voltage outputs.

Integration Capabilities

- Up to 4 zones

Supported Command Types

- **DEVICE** allows control and monitoring of zone levels
- **OUTPUT** allows control and monitoring of the device outputs

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
ESN QS for Motor Module	✓			✓	

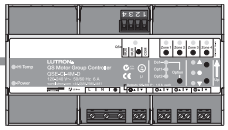

Energi Savr Node™ QS for Motor Module (International) *(continued)*
DEVICE Commands

DEVICE Command Format

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Zone 1 – Zone 4[1,2]	1 – 4	Set or Get Light Level, Raise, Lower, Stop

NOTES

1. Assigned zones can be given an individual Integration ID and controlled using the *#OUTPUT* command. For more details on setting the output Integration ID of a zone component, see the Integration Access Point section of the system that contains the QS Motor Module.
2. When the QS Motor Module is part of a Quantum® system, then the commands found in the Quantum® "System Commands" section of this integration document should be used.

Action Numbers and Parameters:

Action	Action Number	Parameters
Set Light Level	14	Level = 0–100 or 0.00–100.00[1] Fade[2] in: Always use 0 Delay[3] in: SS.ss[4], SS, MM:SS, or HH:MM:SS
Raise	18	None
Lower	19	None
Stop	20	None

NOTES

1. Setting the level to 0% will cause the output to travel in the Closed direction; setting the level to 100% will cause the output to travel in the Open direction; setting any level from 1–99% will be ignored by the output. Querying its level will report 0 or 100%, based on the last direction it moved.
2. Fade is not available for Motor Loads because they move at a constant rate. The parameter must be entered, but is ignored.
3. The delay time is optional. When not used, the system will use a zero-second delay.
4. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a fade time is specified as 1.31 seconds, a value of 1.25 seconds will be used.

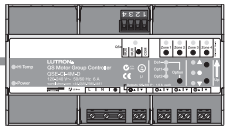

Energi Savr Node™ QS for Motor Module (International) *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 3, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) / Get (?) Zone Level	1	Level = 0 or 100.00[1] Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[4] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising Lowering	4	None
Report Travel Time Remaining[5]	17	Travel time in seconds: 0 – 255
Motor Jog Raise[6]	18	None
Motor Jog Lower[6]	19	None
Motor 4-Stage Jog Raise[6]	20	None
Motor 4-Stage Jog Lower[6]	21	None

NOTES

1. Setting the level to 0% will cause the output to travel in the Closed direction; setting the level to 100% will cause the output to travel in the Open direction; setting any level from 1 – 99% will be ignored by the output. Querying its level will report 0 or 100%, based on the last direction it moved.
2. Fade is not available for Shades because they move at a constant rate. The parameter must be entered, but is ignored.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter-second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
4. The delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0.25 seconds; the maximum delay time is 4 hours.
5. If the travel time of a motor is greater than 255 seconds, the unit will report 255 until the travel time drops below that value.
6. Not supported in QS Standalone.

Remote Power Module

Adaptive Phase Control Model: HW-RPM-4A
Phase Control Model: HW-RPM-4U
Quiet Fan Speed Control Model: HW-RPM-4FSQ
3-Wire Motor Control Model: HW-RPM-4M
Relay Switching Model: HW-RPM-4R

HW-RPM-4A

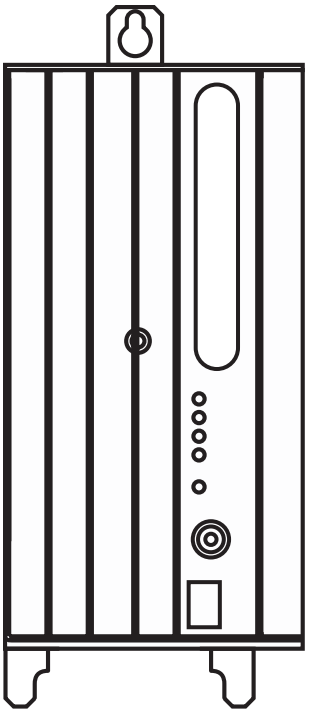

Why Integrate with a Remote Power Module?

- Control individual zones and scenes in an area
- Query current scene and light levels

Integration Capabilities

- Up to four zones on each remote power module

Supported Command Types

- **OUTPUT** allows control and monitoring of the control zone output

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Remote Power Module		✓		✓	



Remote Power Module *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 6, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Level	1	0–100 or 0.00–100.00
		SS.ss[1], SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Stop Lowering	3	None
Stop Raising/Lowering	4	None
Start Flash[2]	5	SS.ss[1], SS, MM:SS, or HH:MM:SS
Pulse	6	SS.ss[1], SS, MM:SS, or HH:MM:SS
Motor Jog Raise	18	None
Motor Jog Lower	19	None
Motor 4-Stage Jog Raise	20	None
Motor 4-Stage Jog Lower	21	None

NOTES

1. Fractions are rounded **up** to the closest ¼ second.
2. To stop a dimmer from flashing, send it to a valid level (action 1).

Architrave™ Keypad

QS Models (QSWAS-) with Faceplate/Button Kit Models (KP5-, KP7-): DN, KP7
HomeWorks® QS Models (HQWA-) with Faceplate/Button Kit Models (KP5-, KP7-): DN, KP7

KP5-DN

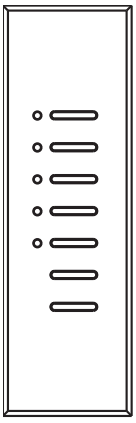

KP5-DW

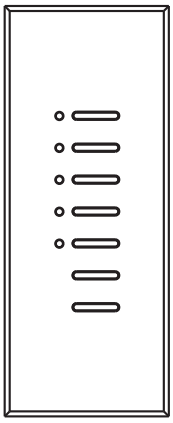

QS	HomeWorks® QS
Button 1	Button 1
Button 2	Button 2
Button 3	Button 3
Button 4	Button 4
Button 5	Button 5
Raise	Button 6
Lower	Button 7

KP7-DN

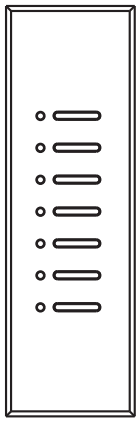

KP7-DW

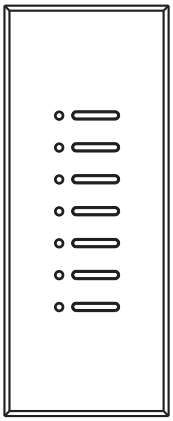

QS	HomeWorks® QS
Button 1	Button 1
Button 2	Button 2
Button 3	Button 3
Button 4	Button 4
Button 5	Button 5
Button 6	Button 6
Button 7	Button 7

Why Integrate with an Architrave™ Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

Compatibility

Architrave™ Keypads	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Model	✓	✓			
HomeWorks® QS Model				✓	

Architrave™ Keypad *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Lower	18	Press, Release, Multi Tap, Hold, Hold Release
Raise	19	Press, Release, Multi Tap, Hold, Hold Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1 [1]	81	Set or Get LED state
LED 2 [1]	82	Set or Get LED state
LED 3 [1]	83	Set or Get LED state
LED 4 [1]	84	Set or Get LED state
LED 5 [1]	85	Set or Get LED state
LED 6 [1]	86	Set or Get LED state
LED 7 [1]	87	Set or Get LED state

NOTE

1. Available only on units in a Quantum® or HomeWorks® system.

Architrave™ Keypad *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press/CCI Close	3	None
Release/CCI Open	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State[1]	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second[2] 3 = Rapid-Flash: 10 flashes every second[2]
Hold Release[2]	32	None

NOTES

1. Quantum® or HomeWorks® only. “Set” is for unprogrammed buttons and buttons with LED logic ‘Defined by Integration.’
2. Available only on units in a Quantum® or HomeWorks® system.

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3*<CR><LF>
Turn On LED 5.	*#DEVICE,2,85,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,2,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,2,81,9,1*<CR><LF>

Signature Series™ Keypad

QS Models (QSWAS-): 1B, 1RLD, 2B, 2BRL, 2RLD, 3B, 3BD, 3BRL, 5B, 5BRL, 7B

HomeWorks® QS Models (HQWAS-B, HQWAS-G) with Faceplate/Button Kit Models (LFS-W): 1B, 1RLD, 2BS, 2RLD, 3BS, 3BD, 3BSRL, 4BS, 4S, 5B, 5BRL, 6B, 6BRL, 7B

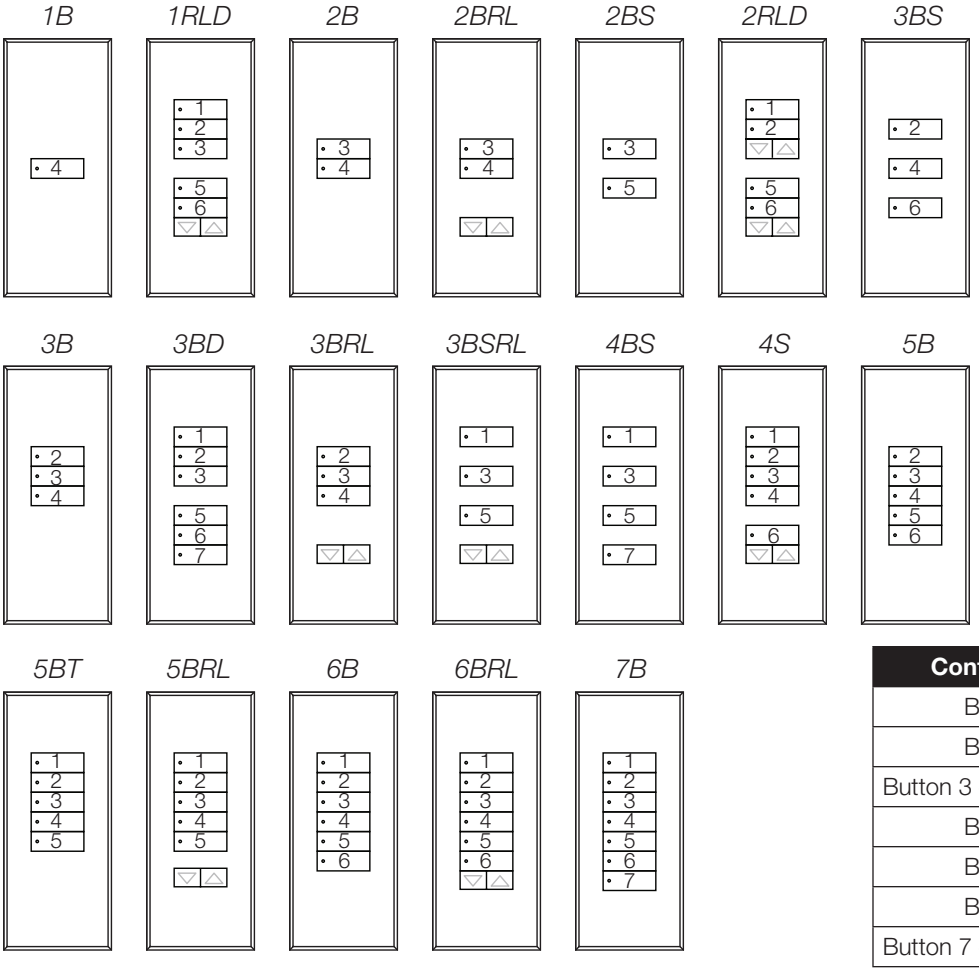

Configuration
Button 1
Button 2
Button 3 or Raise/Lower
Button 4
Button 5
Button 6
Button 7 or Raise/Lower

Why Integrate with a Signature Series™ Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

Compatibility

Signature Series™ Keypads	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Model	✓	✓			
HomeWorks® QS Model				✓	

Signature Series™ Keypad *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Button Top Lower	16	Press, Release, Multi Tap, Hold, Hold Release
Button Top Raise	17	Press, Release, Multi Tap, Hold, Hold Release
Button Bottom Lower	18	Press, Release, Multi Tap, Hold, Hold Release
Button Bottom Raise	19	Press, Release, Multi Tap, Hold, Hold Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1[1]	81	Set or Get LED state
LED 2[1]	82	Set or Get LED state
LED 3[1]	83	Set or Get LED state
LED 4[1]	84	Set or Get LED state
LED 5[1]	85	Set or Get LED state
LED 6[1]	86	Set or Get LED state
LED 7[1]	87	Set or Get LED state

NOTE

1. Available only on units in a Quantum® or HomeWorks® system.

Signature Series™ Keypad *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State [1]	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second 3 = Rapid-Flash: 10 flashes every second
Hold Release [2]	32	None

NOTES

1. Quantum® or HomeWorks® only. “Set” is for unprogrammed buttons and buttons with LED logic ‘Defined by Integration.’
2. Available only on units in a Quantum® or HomeWorks® system.

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3*<CR><LF>
Turn On LED 5.	*#DEVICE,2,85,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,2,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,2,81,9,1*<CR><LF>

seeTouch® Keypad

QS Models (QSWS2-): 1B, 1RLD, 2B, 2BRL, 2BRLIR, 2RLD, 3B, 3BD, 3BRL, 3BRLIR, 5B, 5BRL, 5BRLIR, 7B
RadioRA® 2 Models (RRD-W): 1RLD, 2RLD, 3BD, 3BRL, 3BSRL, 4S, 5BRL, 5BRLIR, 6BRL, 7B
HomeWorks® QS Models (HQRD-W, HQWD-W, HQWA-W, HQRA-W, HQWAS-W):
1B, 1RLD, 2BS, 2RLD, 3BS, 3BD, 3BSRL, 4BS, 4S, 5B, 5BRL, 5BIR, 6B, 6BRL, 7B
Clear Connect® Device Models (CCD-W): 6BRL

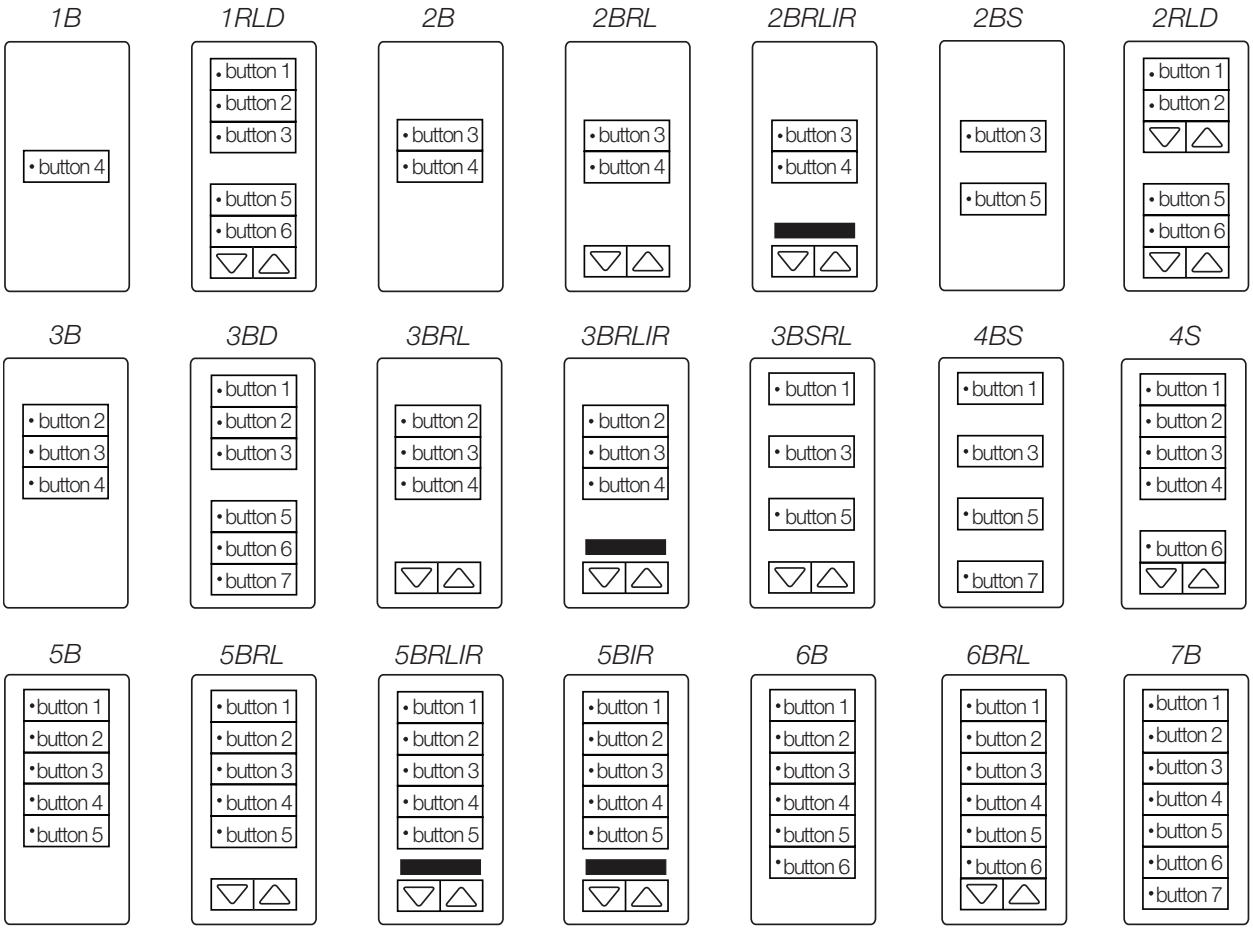

Why Integrate with a seeTouch® Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

Compatibility

seeTouch® Keypads	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Model	✓	✓			
RadioRA® 2 Model			✓		
HomeWorks® QS Model				✓	
Clear Connect® Device Model					✓



seeTouch® Keypad *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release
Button 2	2	Press, Release
Button 3	3	Press, Release
Button 4	4	Press, Release
Button 5	5	Press, Release
Button 6	6	Press, Release
Button 7	7	Press, Release
Button Top Lower	16	Press, Release
Button Top Raise	17	Press, Release
Button Bottom Lower	18	Press, Release
Button Bottom Raise	19	Press, Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1 [1]	81	Set or Get LED state
LED 2 [1]	82	Set or Get LED state
LED 3 [1]	83	Set or Get LED state
LED 4 [1]	84	Set or Get LED state
LED 5 [1]	85	Set or Get LED state
LED 6 [1]	86	Set or Get LED state
LED 7 [1]	87	Set or Get LED state

NOTE

1. Available only on units in a Quantum® or HomeWorks® system.



seeTouch® Keypad *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press/CCI Close	3	None
Release/CCI Open	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State [1,2]	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second [1] 3 = Rapid-Flash: 10 flashes every second [1]

NOTES

1. Available only on units in a Quantum® or HomeWorks® system.
2. Quantum® or HomeWorks® only. “Set” is for unprogrammed buttons and buttons with LED logic ‘Defined by Integration.’

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3*<CR><LF>
Turn On LED 5.	*#DEVICE,2,85,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,2,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,2,81,9,1*<CR><LF>

seeTouch® QS Keypad (International)

QS Models (QSWE-): 2B, 3B, 4B, 5BRL, 5BRLIR, 6BRL, 7BRL, 8BRL, 8BRLIR, 10BRL
HomeWorks® QS Models (HWQIS-NB-NONE) with Faceplate/Button Kit Models (LFS-W):
2B, 3B, 4B, 5BRL, 5BRLIR, 6BRL, 7BRL, 8BRL, 8BRLIR, 10BRL

2B

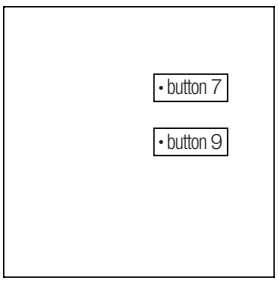

3B

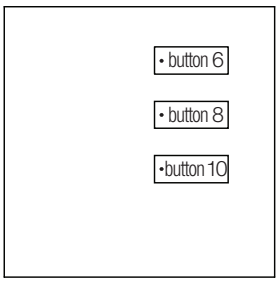

4B

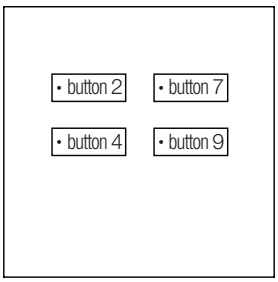

5BRL

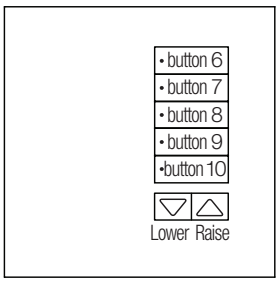

5BRLIR

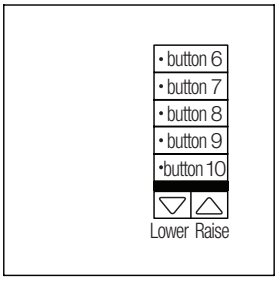

6BRL

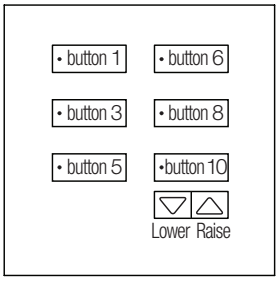

7BRL

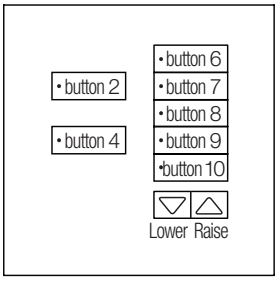

8BRL

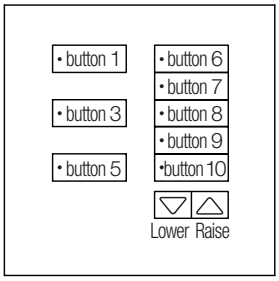

8BRLIR

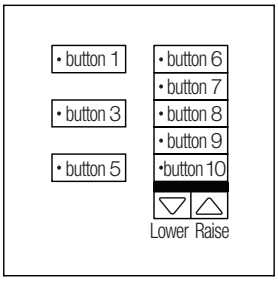

10BRL

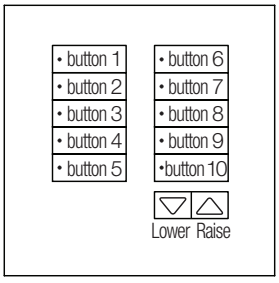

Why Integrate with a seeTouch® QS Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

Compatibility

seeTouch® QS Keypads (International)	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Model	✓	✓			
HomeWorks® QS Model				✓	

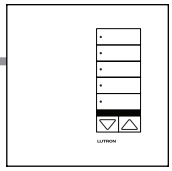

seeTouch® QS Keypad (International) *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Button 8	8	Press, Release, Multi Tap, Hold, Hold Release
Button 9	9	Press, Release, Multi Tap, Hold, Hold Release
Button 10	10	Press, Release, Multi Tap, Hold, Hold Release
Lower	18	Press, Release, Multi Tap, Hold, Hold Release
Raise	19	Press, Release, Multi Tap, Hold, Hold Release
CCI 1	25	Press, Release
CCI 2	26	Press, Release
LED 1[1]	81	Set or Get LED state
LED 2[1]	82	Set or Get LED state
LED 3[1]	83	Set or Get LED state
LED 4[1]	84	Set or Get LED state
LED 5[1]	85	Set or Get LED state
LED 6[1]	86	Set or Get LED state
LED 7[1]	87	Set or Get LED state
LED 8[1]	88	Set or Get LED state
LED 9[1]	89	Set or Get LED state
LED 10[1]	90	Set or Get LED state

NOTE

1. Not supported in QS Standalone.

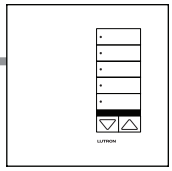

seeTouch® QS Keypad (International) *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press/CCI Close	3	None
Release/CCI Open	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State [1]	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every sec 3 = Rapid-Flash: 10 flashes every sec
Hold Release[2]	32	None

NOTES

1. "Set" is for unprogrammed buttons and buttons with LED logic 'Defined by Integration.'
2. Not supported in QS Standalone.

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3*<CR><LF>
Turn On LED 5.	*#DEVICE,2,85,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,2,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,2,81,9,1*<CR><LF>

Tabletop seeTouch® Keypad

RadioRA® 2 Models (RR-): T5RL, T10RL, T15RL
HomeWorks® QS Models (HQR-, HQK-, HQQ-, HQM-, HQN-):
T5RL, T10RL, T15RL, T5CRL, T10CRL, T15CRL

T5-RL

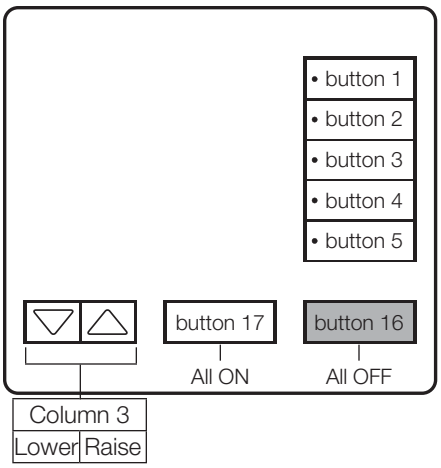

T10-RL

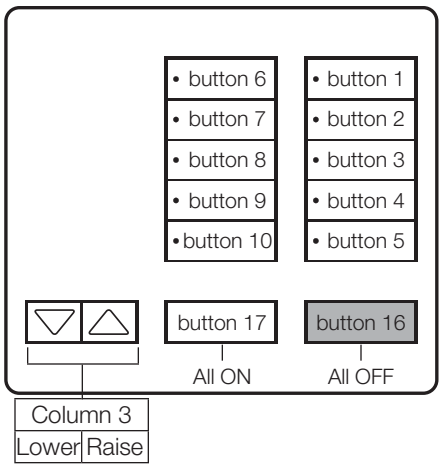

T15-RL

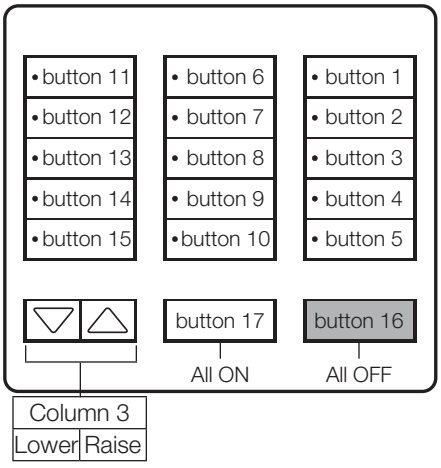

T15-CRL

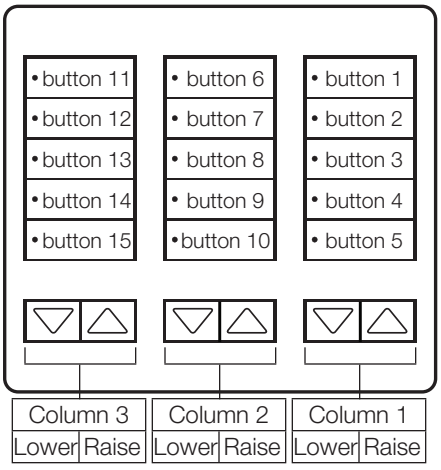

Why Integrate with a Tabletop seeTouch® Keypad?

- Simulate a button press
- Control LEDs of unprogrammed buttons

Additional Commands

- None

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Tabletop seeTouch®			✓	✓	

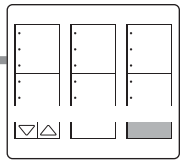

Tabletop seeTouch® Keypad *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation — *Integration ID (example)*

#DEVICE, 3, Component Number, Action Number, Parameters

Command — *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release
Button 2	2	Press, Release
Button 3	3	Press, Release
Button 4	4	Press, Release
Button 5	5	Press, Release
Button 6	6	Press, Release
Button 7	7	Press, Release
Button 8	8	Press, Release
Button 9	9	Press, Release
Button 10	10	Press, Release
Button 11	11	Press, Release
Button 12	12	Press, Release
Button 13	13	Press, Release
Button 14	14	Press, Release
Button 15	15	Press, Release
Button 16	16	Press, Release
Button 17	17	Press, Release
Column 1: Lower	20	Press, Release
Column 1: Raise	21	Press, Release
Column 2: Lower	22	Press, Release
Column 2: Raise	23	Press, Release
Column 3: Lower	24	Press, Release
Column 3: Raise	25	Press, Release

Continued on next page…

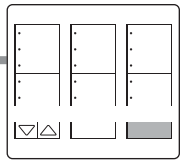

Tabletop seeTouch® Keypad *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Component Numbers *(continued)*:

Component	Component Number	Available Actions
LED 1	81	Set or Get LED state
LED 2	82	Set or Get LED state
LED 3	83	Set or Get LED state
LED 4	84	Set or Get LED state
LED 5	85	Set or Get LED state
LED 6	86	Set or Get LED state
LED 7	87	Set or Get LED state
LED 8	88	Set or Get LED state
LED 9	89	Set or Get LED state
LED 10	90	Set or Get LED state
LED 11	91	Set or Get LED state
LED 12	92	Set or Get LED state
LED 13	93	Set or Get LED state
LED 14	94	Set or Get LED state
LED 15	95	Set or Get LED state

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set (#) or Get (?) LED State *Set is for unprogrammed LEDs only*	9	0 = Off 1 = On

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 3.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,3,1,3*<CR><LF>
Turn On LED 1.	*#DEVICE,3,81,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,3,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,3,81,9,1*<CR><LF>

Hybrid Keypad

RadioRA® 2 Models (RRD-H): 1RLD, 2RLD, 3BSRL, 4S, 5BRL, 6BRL
HomeWorks® QS Models (HQRD-H): 1RLD, 2RLD, 3BSRL, 4S, 5BRL, 6BRL

H6BRL

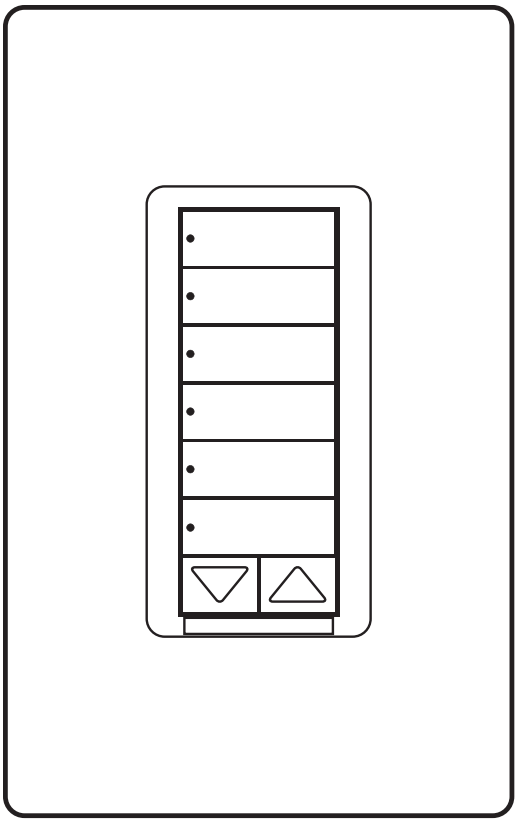

Why Integrate with a Hybrid Keypad?

- Turn On to specific light level or Off
- Raise/Lower light level
- Query current light level

Additional Commands

- None

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Hybrid Keypad			✓	✓	



Hybrid Keypad *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set or Get Zone Level	1	Level = 0–100 or 0.00–100.00 Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Start Flashing[3,4,5]	5	Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS

NOTES

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.
3. The system will not report a level while the output is flashing, it will instead report that it is flashing.
4. Default flash every second, unless fade time is specified (flash period is 2× fade time).
5. To stop a dimmer from flashing, send it to a valid level.

Example OUTPUT Commands

Examples presume dimmer has been assigned Integration ID 1.

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	*#OUTPUT,1,1,75,01:30*<CR><LF>
Start Raising dimmer level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering dimmer level.	*#OUTPUT,1,4*<CR><LF>
Start Flashing a dimmer.	*#OUTPUT,1,5*<CR><LF>
Start Flashing a dimmer once every 2 seconds.	*#OUTPUT,1,5,1*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1,2]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTES

1. The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels. Example: If the "Over Sink" (1) dimmer is at 20% and is then commanded to go to 100% by sending *#OUTPUT,1,1,100* the response from the system will be *~OUTPUT,1,1,100.00*
2. The system will not report a level while the output is flashing, it will instead report that it is flashing.



Hybrid Keypad *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release
Button 2	2	Press, Release
Button 3	3	Press, Release
Button 4	4	Press, Release
Button 5	5	Press, Release
Button 6	6	Press, Release
Button 7	7	Press, Release
Button Top Lower	16	Press, Release
Button Top Raise	17	Press, Release
Button Bottom Lower	18	Press, Release
Button Bottom Raise	19	Press, Release
LED 1	81	Set or Get LED state
LED 2	82	Set or Get LED state
LED 3	83	Set or Get LED state
LED 4	84	Set or Get LED state
LED 5	85	Set or Get LED state
LED 6	86	Set or Get LED state
LED 7	87	Set or Get LED state



Hybrid Keypad *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Set (#) or Get (?) LED State	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second [1] 3 = Rapid-Flash: 10 flashes every second [1]

NOTE

1. "Set" is for LEDs on unprogrammed buttons and buttons with LED logic 'Defined by Integration.'

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3*<CR><LF>
Turn On LED 5.	*#DEVICE,2,85,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,2,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,2,81,9,1*<CR><LF>

Pico® Wireless Control

CURRENT Models: PJ-2B, PJ-2BRL, PJ-3B, PJ-3BRL, PJ2-2B, PJ2-2BRL, PJ2-3B, PJ2-3BRL, PJ2-4B
LEGACY Models:
QS Models (QSR4P-, QSR8P-, QSRKP-, QSRMP-): 2, 2R, 3R
RadioRA® 2 Models (RRD- P): 3BRL-L, 3BRL-S

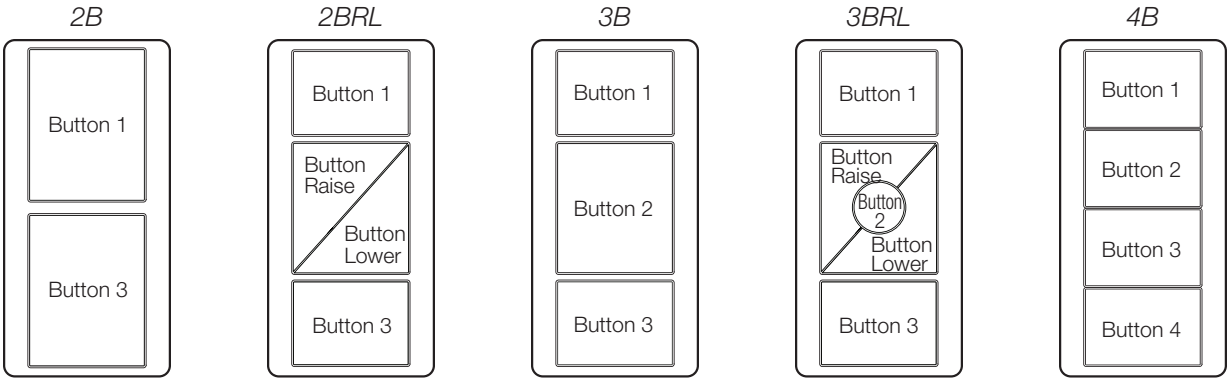

Why Integrate with a Pico® Wireless Control?

- Simulate a button press
- Monitor button presses

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Model*	1	✓2			
RadioRA® 2 Model			✓		✓4
Pico® PJ- Models	1	✓2,3	✓	✓	✓4
Pico® PJ2- Models	1	✓2,3	✓	✓	✓4

NOTES

1. In QS Standalone systems, the Pico® is integrated through its associated QSM. Refer to the **QS Sensor Module (QSM)** section.
2. Can be used only when associated to a QSM.
3. PJ2-4B is supported only on QSM software version 7.28 and higher.
4. All models supported except PJ2-4B.



Pico® Wireless Control *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
For all Legacy models and all Current models *except* for PJ2-4B		
Button 1	2	Press, Release
Button 2	3	Press, Release
Button 3	4	Press, Release
Button Raise	5	Press, Release
Button Lower	6	Press, Release
For PJ2-4B model *only*		
Button 1	8	Press, Release
Button 2	9	Press, Release
Button 3	10	Press, Release
Button 4	11	Press, Release

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None

Example DEVICE Commands

Examples presume Pico® control has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1 (on a non-4B model).	*#DEVICE,2,2,3*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Button 1 was pressed.	*~DEVICE,2,2,3*<CR><LF>

Dynamic Keypad

Model: HQ-J-DK420

HQ-J-DK420

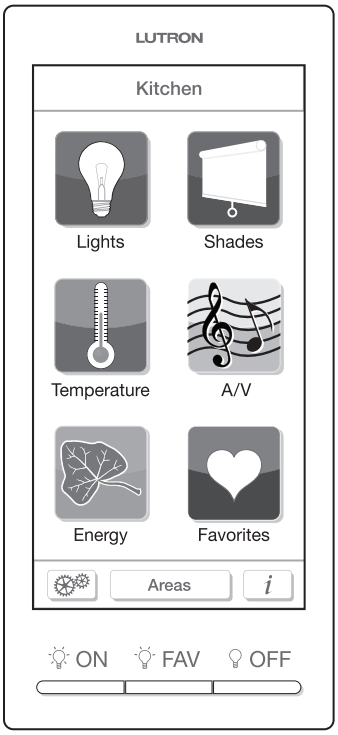

Why Integrate with a Dynamic Keypad?

- Recognize a button press/release in order to control a third party device from the Dynamic Keypad's user interface
- Simulate a button press
- Control LEDs of unprogrammed buttons

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Dynamic Keypad				✓	



Dynamic Keypad *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1 (left hard button)	1	Press, Release
Button 2 (middle hard button)	2	Press, Release
Button 3 (right hard button)	3	Press, Release
Button N[1]	N	Press, Release
LED M[1]	M	Set or Get LED state

NOTE

1. Component Numbers for the various pages of buttons and LEDs for a Dynamic Keypad are generated by the HomeWorks® QS Software.

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State	9	0 = Off 1 = On 2 = Normal-Flash 3 = Rapid-Flash

Example DEVICE Commands

Examples presume the Dynamic Keypad has been assigned Integration ID 23.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 118.	*#DEVICE,23,118,3*<CR><LF>
Turn On LED 566.	*#DEVICE,23,566,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 566?	*?DEVICE,23,566,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,23,566,9,1*<CR><LF>

Wallbox Input Closure Interface

Model: QSE-CI-WCI

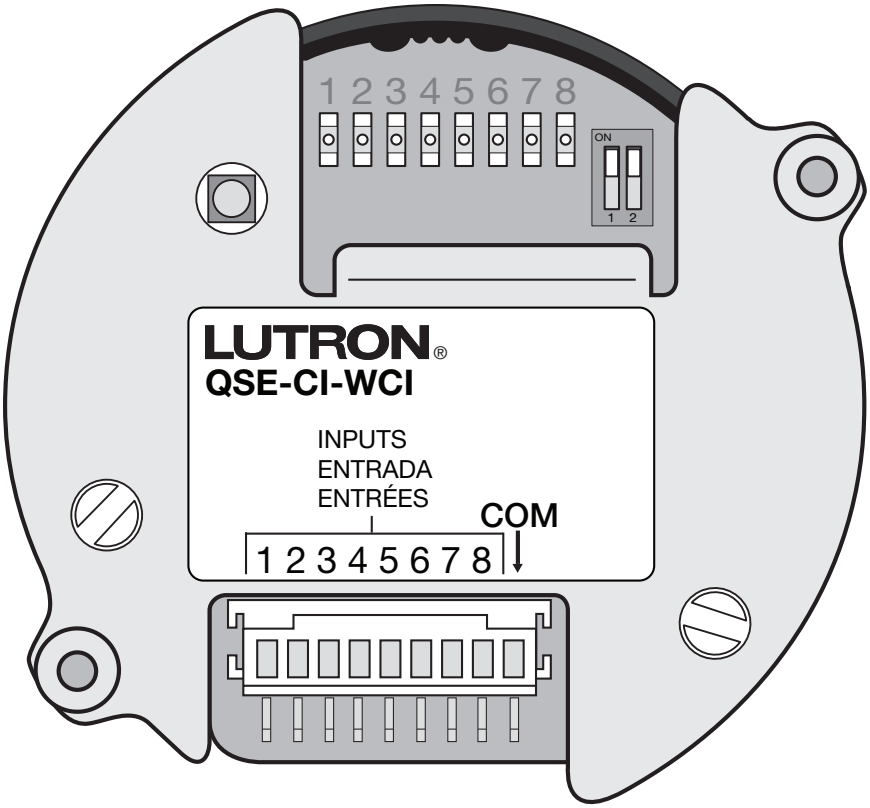

Why Integrate with a Wallbox Input Closure Interface?

- Simulate a button press

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Wallbox Input Closure Interface	✓	✓		✓	

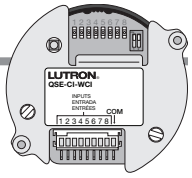

Wallbox Input Closure Interface *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 2, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Button 1	1	Press, Release, Multi Tap, Hold, Hold Release
Button 2	2	Press, Release, Multi Tap, Hold, Hold Release
Button 3	3	Press, Release, Multi Tap, Hold, Hold Release
Button 4	4	Press, Release, Multi Tap, Hold, Hold Release
Button 5	5	Press, Release, Multi Tap, Hold, Hold Release
Button 6	6	Press, Release, Multi Tap, Hold, Hold Release
Button 7	7	Press, Release, Multi Tap, Hold, Hold Release
Button 8	8	Press, Release, Multi Tap, Hold, Hold Release
LED 1[1]	81	Set or Get LED state
LED 2[1]	82	Set or Get LED state
LED 3[1]	83	Set or Get LED state
LED 4[1]	84	Set or Get LED state
LED 5[1]	85	Set or Get LED state
LED 6[1]	86	Set or Get LED state
LED 7[1]	87	Set or Get LED state
LED 8[1]	88	Set or Get LED state

NOTE

1. Available only on units in a Quantum® or HomeWorks® system.

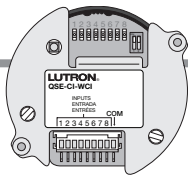

Wallbox Input Closure Interface *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold (only if input mode is Momentary)	5	None
Multi-tap	6	None
Set (#) or Get (?) LED State [1]	9	0 = Off 1 = On 2 = Normal-Flash: 1 flash every second [2] 3 = Rapid-Flash: 10 flashes every second [2]
Hold Release [2]	32	None

NOTES

1. Quantum® or HomeWorks® only. “Set” is for unprogrammed buttons and buttons with LED logic ‘Defined by Integration.’
2. Available only on units in a Quantum® or HomeWorks® system.

Example DEVICE Commands

Examples presume keypad has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3*<CR><LF>
Turn On LED 5.	*#DEVICE,2,85,9,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,2,81,9*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,2,81,9,1*<CR><LF>

Sivoia® QS Shade
Sivoia® QS Wireless Shade



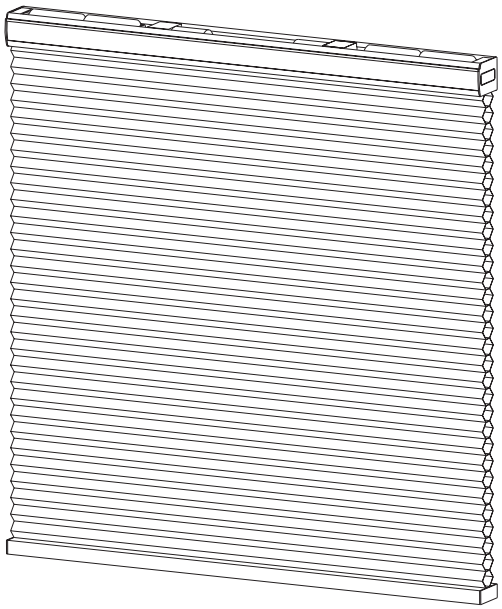

Why Integrate with a Sivoia® QS Shade?

- Set shades to a specific level
- Query current level

Integration Capabilities

- One controllable output (use OUTPUT command)

Supported Command Types

- **OUTPUT** allows control and monitoring of the shade output
- **SHADEGRP** allows control of shade groups in a Quantum® or HomeWorks® QS system. Shade Groups are collections of shades that operate in unison.

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Sivoia® QS Shade	✓	✓		✓	
Sivoia® QS Wireless Shade			✓	✓	✓

Includes all roller, cellular, and drapery styles

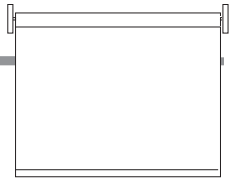

Sivoia® QS Shade *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation — *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command — *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Zone Level	1	Level[1] = 0–100 or 0.00–100.00[2] Fade[3] in: SS.ss[4], SS, MM:SS, or HH:MM:SS Delay[5] in: SS.ss[4], SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None

NOTES

1. For shades, a level of 0 (or 0.00) equals closed and a level of 100 (or 100.00) equals full open.
2. 0% = Closed; 100% = Open
3. Fade is not available for shades since they move at a constant rate. The parameter must be entered but is ignored.
4. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds a value of 1.25 seconds will be used.
5. The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0.25 seconds. The maximum delay time is 4 hours. *Not supported in QS Standalone.*

Example OUTPUT Messages

Examples presume shade has been assigned Integration ID 1.

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set shade to 75% with a 1 min 30 sec delay.	*#OUTPUT,1,1,75,0,1:30*<CR><LF>
Start Raising shade level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering shade level.	*#OUTPUT,1,4*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTE

1. The system will report the target level of a shade. The actual level is not transmitted while they are moving. Example: If the Living Room Blackouts (Integration ID 1) are at 20% and are commanded to go to 100% by sending *#OUTPUT,1,1,100* the response from the system will be *~OUTPUT,1,1,100.00*

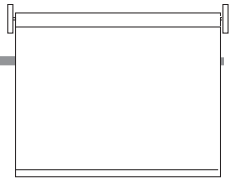

Sivoia® QS Shade *(continued)*
OUTPUT Commands *(continued)*

SHADEGRP Command Formats

Operation — *Integration ID (example)*

#SHADEGRP, 2, Action Number, Parameters

Command — *Use "SHADEGRP Command-specific fields" tables to complete these command fields.*

SHADEGRP Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Get (?) Shade Group Level [1]	1	Level [2] = 0–100 or 0.00–100.00 Delay [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS
Start Raising [4]	2	None
Start Lowering [4]	3	None
Stop Raising/Lowering	4	None
Set (#) or Get (?) Current Preset	6	Preset Number [5] = 0–30
Set (#) Venetian Tilt	14	Level [6] = 0–100 or 0.00–100.00 Fade [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS Delay [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS
Set (#) Lift and Tilt for venetians	15	Lift [6] = 0–100 or 0.00–100.00 Tilt [6] = 0–100 or 0.00–100.00 Fade [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS Delay [2] in: SS.ss [3], SS, MM:SS, or HH:MM:SS
Raise Venetian Tilt [4]	16	None
Lower Venetian Tilt [4]	17	None
Stop Venetian Tilt [4]	18	None
Raise Venetian Lift [4]	19	None
Lower Venetian Lift [4]	20	None
Stop Venetian Lift [4]	21	None

NOTES

1. Get (?) Shade Group Level (action number 1).
2. The Fade and Delay time are optional. For shades, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay. When not used, the system will use a zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
4. When a Raise/Lower command is issued, the shade group's level will continue to go towards open/close until a Stop command is received.
5. Preset 0 is the Open Preset and Preset 30 is the Closed Preset.
6. The Level is accepted as a percentage, where 100% is fully open and 0% is fully closed.

Sivoia® QS Venetian Blind
Sivoia® QS Wireless Venetian Blind

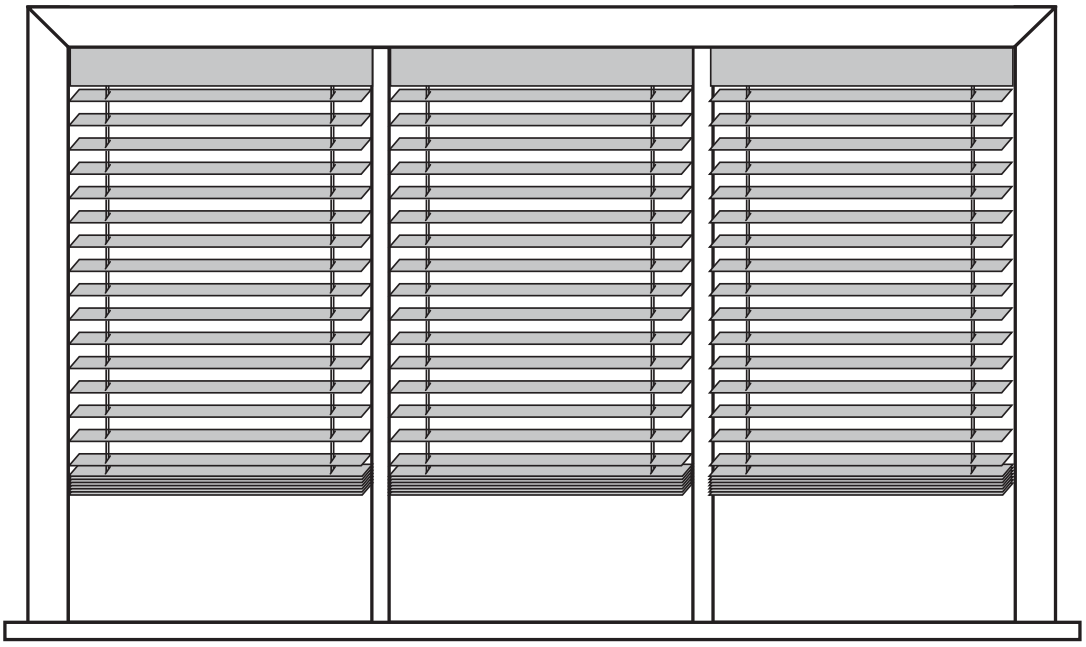

Why Integrate with a Sivoia® QS Venetian Blind?

- Set Venetian blind tilt, lift to specific levels
- Query current tilt, lift levels

Integration Capabilities

- One controllable output (use OUTPUT command)

Supported Command Types

- **OUTPUT** allows control and monitoring of the Venetian blind output
- **SHADEGRP** allows control of shade groups in a Quantum® or HomeWorks® QS system. Shade Groups are collections of shades that operate in unison

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Sivoia® QS Venetian	✓			✓	
Sivoia® QS Wireless Venetian			✓	✓	✓

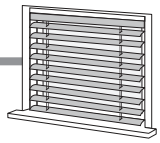

Sivoia® QS Venetian Blind *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set (#) or Get (?) Venetian lift level only	1	Lift Level[1] = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[4] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Set (#) or Get (?) Venetian tilt level only	9	Tilt Level[1] = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[4] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Set (#) or Get (?) Venetian lift & tilt level	10	Lift Level[1] = 0–100 or 0.00–100.00 Tilt Level[1] = 0–100 or 0.00–100.00 Fade[2] in: SS.ss[3], SS, MM:SS, or HH:MM:SS Delay[4] in: SS.ss[3], SS, MM:SS, or HH:MM:SS
Start raising Venetian tilt	11	None
Start lowering Venetian tilt	12	None
Stop Venetian tilt	13	None
Start raising Venetian lift	14	None
Start lowering Venetian lift	15	None
Stop Venetian lift	16	None

NOTES

1.

100%	75%	50%	25%	0%
Lift				
Tilt				
			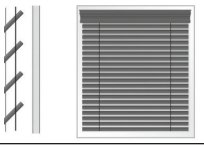	

2. Fade is not available for blinds since they move at a constant rate. The parameter must be entered but is ignored.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a delay time is specified as 1.45 seconds, a value of 1.25 seconds will be used.
4. The Delay time is optional. When not used, the system will use a zero-second delay. The minimum delay time is 0.25 seconds. The maximum delay time is 4 hours. *Not supported in QS Standalone.*

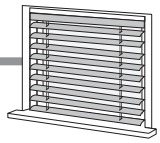

Sivoia® QS Venetian Blind *(continued)*
OUTPUT Commands *(continued)*

Example OUTPUT Messages

Examples presume shade has been assigned Integration ID 1.

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set Venetian blind to lift 0%, tilt 50%	*#OUTPUT,1,10,0,50*<CR><LF>
Start raising Venetian tilt.	*#OUTPUT,1,11*<CR><LF>
Stop raising Venetian tilt.	*#OUTPUT,1,13*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the Venetian lift and tilt?	*?OUTPUT,1,10*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Venetian lift level is 0%, tilt level 50%.	*~OUTPUT,1,10,0.00,50.00*<CR><LF>

NOTE

1. The system will report the target lift level and target tilt level of a Venetian blind. The actual levels are not transmitted while it is moving. Example: If the Kitchen Venetian (Integration ID 1) is set at 25% lift and 75% tilt, and is commanded to go to 100% lift and 50% tilt by sending *#OUTPUT,1,10,100,50,* the response from the system will be *~OUTPUT,1,10,100.00,50.00*

Maestro® Dimmer and Plug-In Module

RadioRA® 2 Models (RRD-): 6D, 6NA, 8ANS, 8S-DV, 10D, 10ND, F6AN-DV, 3LD
RadioRA® 2 Models (RR-): 3PD, 15APS
HomeWorks® QS Models (HQRD-, HQRA): 6D, 6ND, 10D, 10ND, 6NA, F6AN-DV, 8ANS, 8S-DV
HomeWorks® QS Models (HWD-, HWA-): 6D, 6ND, 10D, 10ND, 5NE[1], 8ANS
HomeWorks® QS Models (HQR-): 3PD-1, 15APS-1, 3LD
Clear Connect® Device Models (CCD-W): 6D, 6NA, F6AN-DV, 15APS-1

NOTE

1. 5NE is not available in architectural style

6D

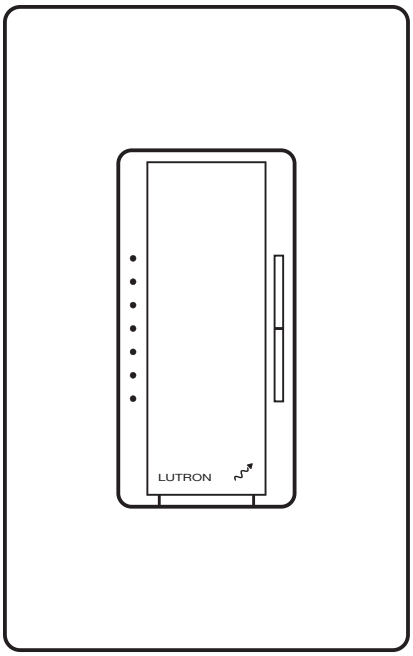

3PD

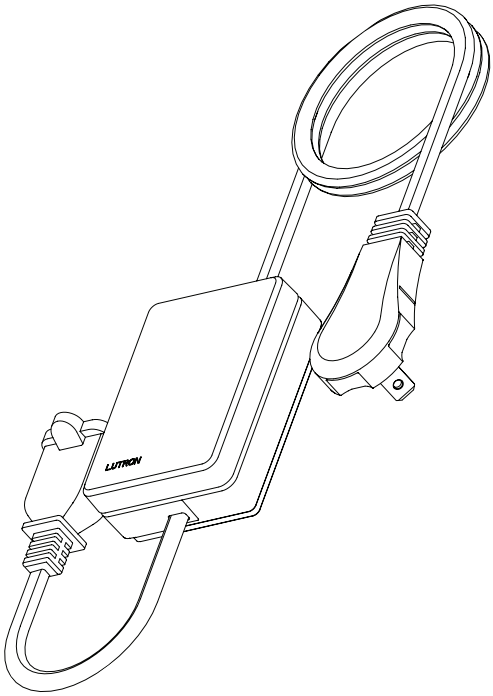

Why Integrate with a Maestro® Dimmer or Plug-In Module?

- Turn On to specific light level or Off
- Raise/Lower light level
- Query current light level

Additional Commands

- None

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
RadioRA® 2 Model			✓		
HomeWorks® QS Model				✓	
Clear Connect® Device Model					✓



Maestro® Dimmer *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Level	1	Level = 0–100 or 0.00–100.00 Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS
Start Raising	2	None
Start Lowering	3	None
Stop Raising/Lowering	4	None
Start Flashing[3,4,5]	5	Fade[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS Delay[1] in: SS.ss[2], SS, MM:SS, or HH:MM:SS

NOTES

1. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay.
2. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.31 seconds a value of 1.25 seconds will be used.
3. The system will not report a level while the output is flashing, it will instead report that it is flashing.
4. Default flash every second, unless fade time is specified (flash period is 2× fade time).
5. To stop a dimmer from flashing, send it to a valid level.

Example OUTPUT Commands

Examples presume dimmer has been assigned Integration ID 1.

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set dimmer to 75% with a 1 min 30 sec fade.	*#OUTPUT,1,1,75,01:30*<CR><LF>
Start Raising dimmer level.	*#OUTPUT,1,2*<CR><LF>
Stop Raising/Lowering dimmer level.	*#OUTPUT,1,4*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[1]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to 90%.	*~OUTPUT,1,1,90.00*<CR><LF>

NOTE

1. The system will report the target level of a dimmer while it is fading from one level to another. The actual level is not transmitted while dimming between levels.
   Example: If the "Over Sink" (1) dimmer is at 20% and is then commanded to go to 100% by sending *#OUTPUT,1,1,100,* the response from the system will be *~OUTPUT,1,1,100.00*



Maestro® Dimmer *(continued)*
DEVICE Commands

DEVICE Command Format

Operation *Integration ID (example)*

#DEVICE[1], 2, Component Number, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

NOTE

1. Supported only in HomeWorks® QS 4.0 or higher.

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Maestro® Tap Switch	6	Press, Release, Double Tap, Hold

Action Numbers and Parameters:

Action	Action Number	Parameters
Press	3	None
Release	4	None
Hold	5	None
Double Tap	6	None

Example OUTPUT Commands

Examples presume dimmer has been assigned Integration ID 2.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Button 1.	*#DEVICE,2,1,3,*<CR><LF>

Maestro® Fan Speed Control

RadioRA® 2 Models (RRD-): 2ANF
HomeWorks® QS Models (HQRD-, HQRA-, HWD-, HWA-): 2ANF

2ANF

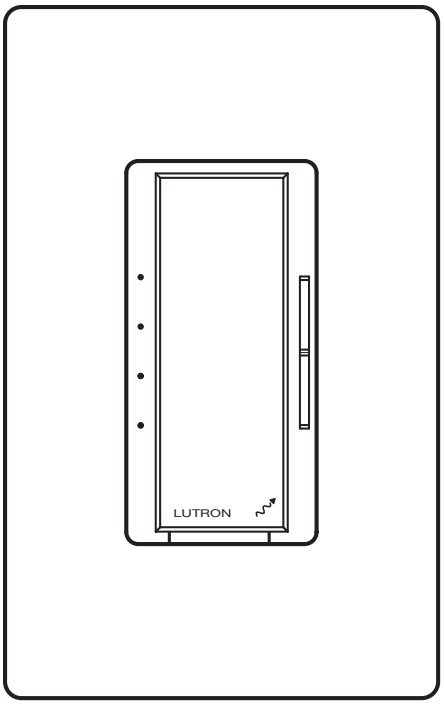

Why Integrate with a Maestro® Fan Speed Control?

- Turn On to specific speed (High, Medium-High, Medium, Low, or Off)
- Raise/Lower fan speed
- Query current speed

Additional Commands

- None

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
RadioRA® 2 Fan Speed Control			✓		
HomeWorks® QS Fan Speed Control				✓	



Maestro® Fan Speed Control *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation — *Integration ID (example)*

#OUTPUT[1], 1, Action Number, Parameters

Command — *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

NOTE

1. Supported only in HomeWorks® QS 4.0 or higher and RadioRA® 2 6.0 or higher.

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Set or Get Zone Level	1	Levels: 0 = Off 1–25% = Low 26–50% = Medium 56–75% = Medium High 76–100% = High

Example OUTPUT Commands

Examples presume dimmer has been assigned Integration ID 1.

Operation	Command String
Execute: #OUTPUT, Integration ID, Action Number, Parameters	
Set fan speed to Medium High.	*#OUTPUT,1,1,75*<CR><LF>
Query: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,1,1*<CR><LF>
Response[3]: ~OUTPUT, Integration ID, Action Number, Parameters	
Output level is set to High.	*~OUTPUT,1,1,100.00*<CR><LF>

Visor Control Receiver

RadioRA® 2 Model: RR-VCRX
HomeWorks® QS Model: HQR-VCRX

RR-VCRX

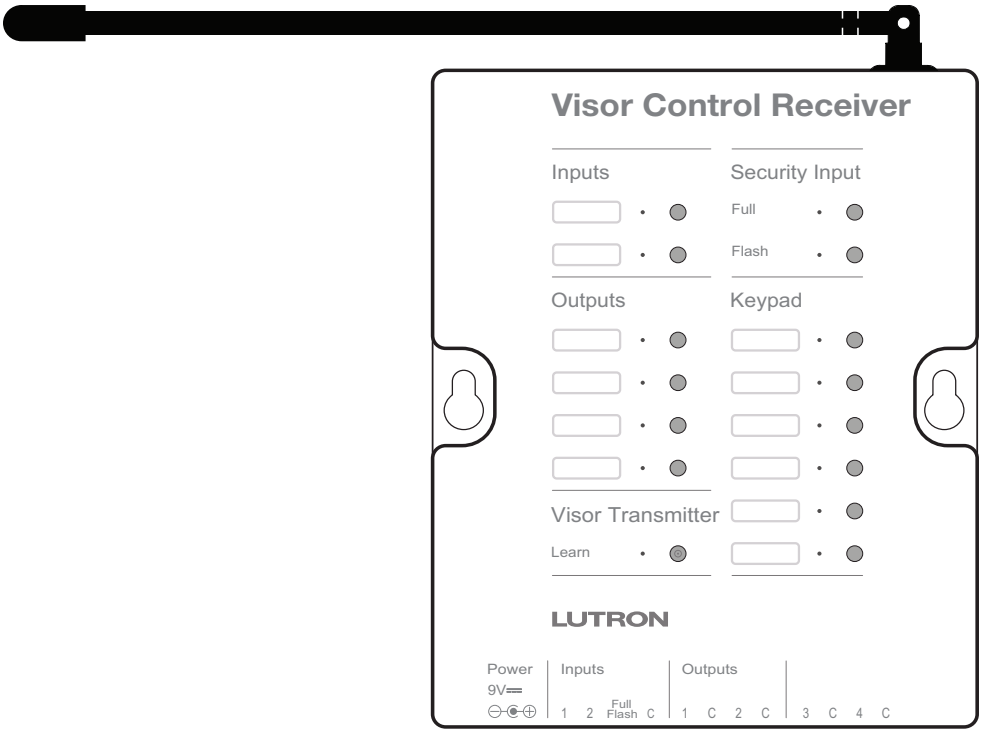

Why Integrate with a Visor Control Receiver?

- Simulate a keypad press or contact closure inputs
- Control LEDs of unprogrammed buttons
- Control contact closure outputs

Additional Commands

- None

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Visor Control Receiver			✓	✓	

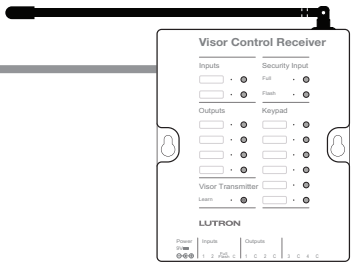

Visor Control Receiver *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Scene 1	1	Press, Release
Scene 2	2	Press, Release
Scene 3	3	Press, Release
Scene 4	4	Press, Release
Scene 5	5	Press, Release
Scene 6	6	Press, Release
Full/Security	30	Open Input, Close Input
Security Flash	31	Open Input, Close Input
Input 1	32	Open Input, Close Input
Input 2	33	Open Input, Close Input
LED Scene 1	81	Set or Get LED state
LED Scene 2	82	Set or Get LED state
LED Scene 3	83	Set or Get LED state
LED Scene 4	84	Set or Get LED state
LED Scene 5	85	Set or Get LED state
LED Scene 6	86	Set or Get LED state

Action Numbers and Parameters:

Action	Action Number	Parameters
Press, Close Input	3	None
Release, Open Input	4	None
Set (#) or Get (?) LED State **Note:** *Valid for Scene LEDs only*	9	0 = Off; 1 = On

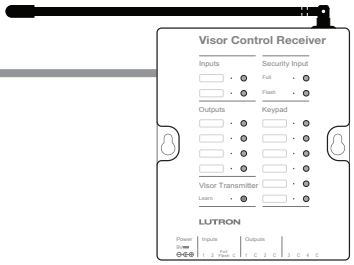

Visor Control Receiver *(continued)*
DEVICE Commands *(continued)*

Example DEVICE Commands

Examples presume Visor Control Receiver has been assigned Integration ID 5.

Operation	Command String
Execute: #DEVICE, Integration ID, Component Number, Action Number, Parameters	
Press Scene 1.	*#DEVICE,5,1,3*<CR><LF>
Turn On Scene 1 LED.	*#DEVICE,5,9,81,1*<CR><LF>
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the state of LED 1?	*?DEVICE,5,9,81*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
LED 1 is On.	*~DEVICE,5,9,81,1*<CR><LF>

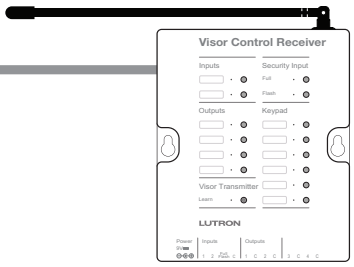

Visor Control Receiver *(continued)*
OUTPUT Commands

OUTPUT Command Format

Operation *Integration ID (example)*

#OUTPUT,21, Action Number, Parameters

Command

Action number is always 1 for visor control outputs

Use "OUTPUT Command-specific fields" tables to complete the parameter field.

OUTPUT Command-specific fields

Action Numbers and Parameters:

Action	Action Number	Parameters
Set (#) or Query (?) Output State	1	Level[1] = 0–100 or 0.00–100.00
Set Pulse CCO (#)	6	Pulse[2] time in: SS.ss[3], SS, MM:SS, or HH:MM:SS, or Delay[4] in: SS.ss[3], SS, MM:SS, or HH:MM:SS

NOTES

1. Any level greater than 0 will close the output. When level is equal to 0 the output will open.
2. The default time is one second.
3. Fractional seconds "SS.ss" will be rounded down to the nearest quarter second. For example, if a fade time is specified as 1.45 seconds a value of 1.25 seconds will be used.
4. The Fade and Delay time are optional. When not used, the system will use a one-second fade time with zero-second delay. The minimum fade and delay time is 0 seconds. The maximum fade and delay time is 4 hours. For shade outputs, the Fade parameter has no effect (since shades have fixed speeds) but it is required when specifying an optional delay.

Example OUTPUT Messages

Examples presume CCO has been assigned Integration ID 21.

Operation	Command String
Set: #OUTPUT, Integration ID, Action Number, Parameters	
Set output to open.	*#OUTPUT,21,1,0*<CR><LF>
Set output to close.	*#OUTPUT,21,1,1*<CR><LF>
Query[1]: ?OUTPUT, Integration ID, Action Number	
What is the state of the output?	*?OUTPUT,21,1*<CR><LF>
Response[2]: ~OUTPUT, Integration ID, Action Number	
Output state is closed.	*~OUTPUT,21,1,100.00*<CR><LF>

NOTES

1. Momentary outputs should not be queried.
2. The system will report the target level of outputs. Any level greater than 0 means that the output is closed.

Radio Powr Savr™ Sensor

CURRENT Models (LRF2-, CCD-): OCR2B, VCR2B, OKLB, OHLB, OWLB, VKLB, VHLB, VWLB
LEGACY Models (LRF2-): OCRB, VCRB

LRF2-OCR2B

LRF2-OKLB

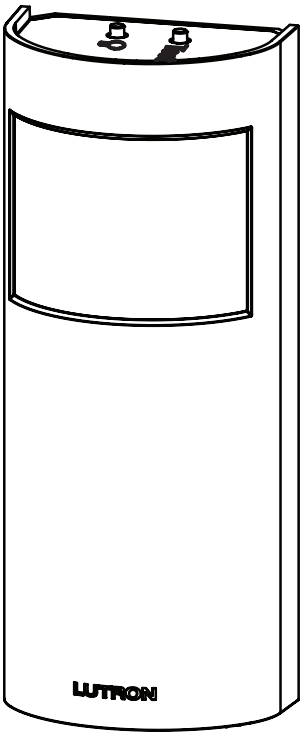

Why Integrate with a Radio Powr Savr™ Sensor?

- Monitor occupied, unoccupied status of a single sensor

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Radio Powr Savr™ Sensor			✓	✓	✓

Radio Powr Savr™ Sensor *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

~DEVICE, 19, 2, Action Number

Command *Occupied state component is always 2 for sensors*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Occupied State	2	Occupied, Unoccupied

Action Numbers:

Action	Action Number
Occupied	3
Unoccupied	4

Example DEVICE Commands

Examples presume sensor has been assigned Integration ID 19.

Operation	Command String
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Radio Powr Savr™ 19 went occupied.	*~DEVICE,19,2,3*<CR><LF>
Radio Powr Savr™ 19 went unoccupied.	*~DEVICE,19,2,4*<CR><LF>

HVAC Controller

MODELS (LR-): HVAC-1-WH, HWLV-HVAC, HVAC-230-S, HVAC-PLC1-CPN7120
MODELS (MWP-T-): OHW-WH-A

LR-HVAC-1-WH

LR-HVAC-230-S

LR-HVAC-PLC1-CPN7120

MWP-T-OHW-WH-A

Why Integrate with an HVAC Controller?

- Get current temperature
- Set or get heat setpoints and cool setpoints
- Set or get operating mode, fan mode and eco mode
- Get connection status to the temperature sensor
- Get schedule information and hold schedules

Supported Command Types

- HVAC allows control and monitoring of the HVAC Controller

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
HVAC Controller			✓	✓	

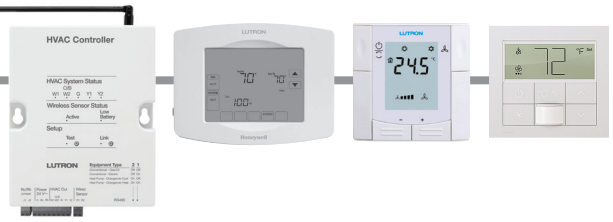

HVAC Controller *(continued)*
HVAC Commands

HVAC Command Format

Operation *Integration ID (example)*

#HVAC,21, Action Number, Parameters

Command *Use "HVAC Command-specific fields" tables to complete these command fields.*

HVAC Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Get (?) Current Temperature (°F)	1	Temperature = 32–212 °F
Set (#) or Get (?) Heat and Cool Setpoints (°F)	2	Heat Setpoint = 32–212 °F Cool Setpoint = 32–212 °F
Set (#) or Get (?) Operating Mode	3	Mode (1 = Off/Protect, 2 = Heat, 3 = Cool, 4 = Auto, 5 = Em.Heat, 7 = Fan, 8 = Dry)
Set (#) or Get (?) Fan Mode	4	Mode (1 = Auto, 2 = On, 3 = Cycler, 4 = No Fan, 5 = High, 6 = Medium, 7 = Low, 8 = Top)
Set (#) or Get (?) Eco (Setback) Mode	5	Mode (1 = Off, 2 = On)
Get (?) Eco Offset	6	Eco Offset = 1–11 °F
Set (#) or Get (?) Schedule Status[1]	7	0 = Schedule Unavailable (Get "?" Only) 1 = Following Schedule (Set "#" or Get "?") 2 = Permanent Hold (Set "#" or Get "?") 3 = Temporary Hold (Get "?" only)
Get (?) Temperature Sensor Connection Status	8	1 = All Sensors are Active 2 = Missing Sensor 3 = Wired Sensor Only 4 = No Sensor
Get (?) Schedule Event	9	Schedule # (1–7), Event # (1–4), HH,MM, SPH, SPC
Get (?) Schedule Day Assignment	10	Schedule#(1–7), DD(Bitmap:Sunday(Bit 0)–Saturday(Bit 6) 1–active day, 0–inactive day)
Get (?) System Mode	11	1 = Normal 2 = Away 3 = Green
Set (#) Emergency Heat Available	13	1 = Not Available 2 = Available

NOTE

1. Schedule Unavailable –> Schedule not programmed or device needs date/time.
Following Schedule –> Running programmed schedule; set points from schedule.
Permanent Hold –> Schedule is not running; set points as adjusted.
Temporary Hold –> Running schedule; set points as adjusted. Returns to following schedule at next schedule event.

Continued on next page…

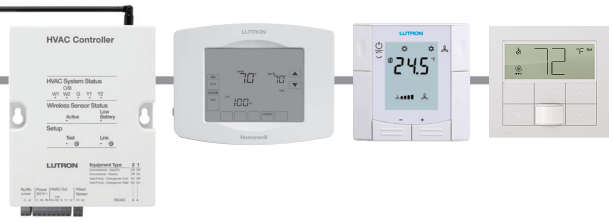

HVAC Controller *(continued)*
HVAC Commands *(continued)*

HVAC Command-specific fields *(continued)*

Action Numbers and **Parameters** *(continued)*:

Action	Action Number	Parameters
Get (?) Call Status	14	0 = None, Last was Heat 1 = Heat Stage 1 2 = Heat Stage 1 and 2 3 = Heat Stage 1, 2 and 3 4 = Heat Stage 3 5 = None, Last was Cool 6 = Cool Stage 1 7 = Cool Stage 1 and 2 8 = Off 9 = Emergency Heat 10 = Dry
Get (?) Current Temperature (°C)[1]	15	Temperature = 0–100 °C
Set (#) or Get (?) Heat and Cool Setpoints (°C)[1] with Eco effect applied	16	Heat Setpoint = 0–100 °C Cool Setpoint = 0–100 °C
Set (#) or Get (?) Heat and Cool Setpoints (°C)[1]	17	Heat Setpoint = 0–100 °C Cool Setpoint = 0–100 °C

NOTE

1. HomeWorks® QS software version 4.1 and higher.

Example HVAC Commands

Operation	Command String
Execute: #HVAC, Integration ID, Action Number, Parameters	
Set Heat Setpoint to 68 °F and Cool Setpoint to 72 °F.	*#HVAC,1,2,68,72*<CR><LF>
Set System Mode to Cool.	*#HVAC,1,3,3*<CR><LF>
Turn Eco Mode On.	*#HVAC,1,5,2*<CR><LF>
Query: ?HVAC, Integration ID, Action Number	
What is the Current Temperature?	*?HVAC,1,1*<CR><LF>
What is are the settings for Schedule 1, Event 2?	*?HVAC,1,9,1,2*<CR><LF>
What days are running Schedule 1?	*?HVAC,1,10,1*<CR><LF>
Response: ~HVAC, Integration ID, Action Number, Parameters	
Current Temperature is 70 °F.	*~HVAC,1,1,70*<CR><LF>
Schedule 1, Event 2 starts at 8:00am with SPH=65,SPC=78	*~HVAC,1,9,1,2,08,00,65,78*<CR><LF>
Schedule 1 is being run on Monday and Tuesday.	*~HVAC,1,10,1,06*<CR><LF>

Wireless Temperature Sensor

Model: LRF2-TWRB

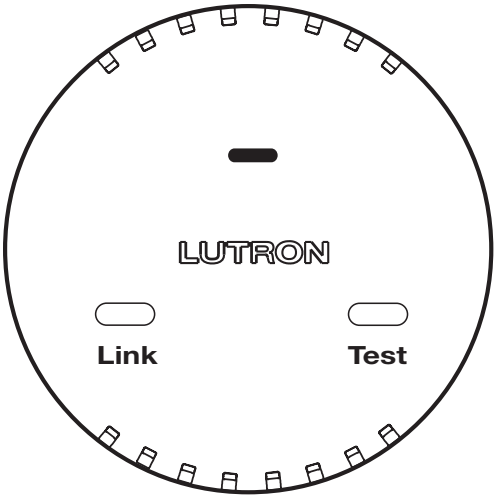

Why Integrate with a Wireless Temperature Sensor?

- Get battery status
  Note: To get current temperature, see HVAC Controller on page 132.

Additional Commands

- None

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
Wireless Temperature Sensor			✓	✓	



Wireless Temperature Sensor *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

?DEVICE, 1, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Battery Status	1	Get battery status

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Get battery status	22	1 = Normal, 2 = Low

Example DEVICE Messages

Operation	Command String
Query: ?DEVICE, Integration ID, Component Number, Action Number	
What is the Temperature Sensor's Battery Status?	*?DEVICE,1,1,22*<CR><LF>
Response: ~DEVICE, Integration ID, Component Number, Action Number, Parameters	
Temperature Sensor's Battery is Low.	*~DEVICE,1,1,22,2*<CR><LF>

QSE-IO

Model: QSE-IO

Why Integrate with a QSE-IO?

- Know the state of the Contact Closure Inputs (CCIs).
- Control the state of the Contact Closure Outputs (CCOs).

Integration Capabilities

5 Contact Closure Inputs (CCIs) and 5 Contact Closure Outputs. The QSE-IO mode of operation is specified by its DIP switch configuration.

- CCI and CCO states can be polled in any DIP configuration.
- CCI events can be monitored through integration in any DIP configuration.
- CCI events (closures or openings of CCIs) can be 'spoofed' (faked) through integration in DIP configurations where momentary CCIs are specified.
- CCO events can be monitored through integration in any DIP configuration.
- The CCO state logic is typically tied to the states of the CCIs or other devices on the QS link and thus, CCO events cannot be generated through integration in most DIP configurations; the exceptions are the output DIP configurations (e.g., Shade Output, Zone Control Output) and the Integration DIP configuration that allows full monitoring of CCIs and control of CCOs through integration.
- Occupancy events can be monitored through integration when the QSE-IO is in an Occupancy DIP configuration.

Supported Command Types

- **DEVICE** allows monitoring of CCI and CCO events and polling of CCI/CCO states and in certain QSE-IO DIP configurations, allows 'spoofing' of CCI events and generation of CCO events.
- **OUTPUT** (in certain output-oriented QSE-IO DIP configurations) allows control and monitoring of the CCOs.

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QSE-IO	✓	✓		✓	

QSE-IO *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 5, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
CCI 1	1	Report (~) closure/opening[1] Poll (?) status Spoof (#) closure/opening[2]
CCI 2	2	Report (~) closure/opening[1] Poll (?) status Spoof (#)closure/opening[2]
CCI 3	3	Report (~) closure/opening[1] Poll (?) status Spoof (#)closure/opening[2]
CCI 4	4	Report (~) closure/opening[1] Poll (?) status Spoof (#)closure/opening[2]
CCI 5	5	Report (~) closure/opening[1] Poll (?) status Spoof (#)closure/opening[2]
CCO 1	11	Report (~) closure/opening[3] Poll (?) status Generate (#) closure/opening[2]
CCO 2	12	Report (~) closure/opening[3] Poll (?) status Generate (#) closure/opening[2]
CCO 3	13	Report (~) closure/opening[3] Poll (?) status Generate (#) closure/opening[2]
CCO 4	14	Report (~) closure/opening[3] Poll (?) status Generate (#) closure/opening[2]
CCO 5	15	Report (~) closure/opening[3] Poll (?) status Generate (#) closure/opening[2]
Occupancy Sensor 1	41	Report (~) occupied/unoccupied[2,4]
Occupancy Sensor 2	42	Report (~) occupied/unoccupied[2,4]
Occupancy Sensor 3	43	Report (~) occupied/unoccupied[2,4]
Occupancy Sensor 4	44	Report (~) occupied/unoccupied[2,4]
Occupancy Sensor 5	45	Report (~) occupied/unoccupied[2,4]

NOTES

1. Monitoring type 2 must be enabled (see QSE-CI-NWK-E #MONITORING section)
2. Feature supported in only some QSE-IO DIP configurations
3. Monitoring type 5 must be enabled (see QSE-CI-NWK-E #MONITORING section)
4. Monitoring type 6 must be enabled (see QSE-CI-NWK-E #MONITORING section)

QSE-IO *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and Parameters:

Action	Action Number	Parameters
Report (~) Closure/Occupied Spoof (#) Closure[1]	3	None
Report (~) Opening/Unoccupied Spoof (#) Opening[1]	4	None
Poll (?) CCO State	14	None
Report (~) CCO State		Level (0 = Open, 100 = Close)
Set (#) CCO State[1]		Level (0 = Open, 100 = Close)
Poll (?) CCI State	33	None

NOTE

1. Feature supported in only some QSE-IO DIP configurations

QSE-IO *(continued)*
OUTPUT Commands

OUTPUT Command Formats

Operation *Integration ID (example)*

#OUTPUT, 1, Action Number, Parameters

Command *Use "OUTPUT Command-specific fields" tables to complete these command fields.*

OUTPUT Command-specific fields

Action Numbers and **Parameters:**

Action	Action Number	Parameters
Get (?) CCO state	1	None
Report (~) CCO state		Level (0 = Open, 100 = Close)
Set (#) CCO state[1]		Level (0 = Open, 100 = Close)

NOTE

1. Feature supported in only some QSE-IO DIP configurations

QS Sensor Module

Models: QSMX-, QSM2-, QSM3-, QSM4-, QSM5-, QSM6-, QSM7-

Why Integrate with a QS Sensor Module?

- View occupancy events that occur.

Integration Capabilities

- Can view occupancy events for up to 14 sensors.
- Can view Pico® button Press/Release Events.

Compatibility

	QS Standalone	Quantum®	RadioRA® 2	HomeWorks® QS	Clear Connect® Gateway System
QS Sensor Module	✓				

QS Sensor Module *(continued)*
DEVICE Commands

DEVICE Command Formats

Operation *Integration ID (example)*

#DEVICE, 19, Component Number, Action Number, Parameters

Command *Use "DEVICE Command-specific fields" tables to complete these command fields.*

DEVICE Command-specific fields

Component Numbers:

Component	Component Number	Available Actions
Wired Occupancy sensors	1–4	Occupied, Unoccupied
Wireless Occupancy sensors 1–10	5–14	Occupied, Unoccupied
Pico® 1 Buttons[1,2]	61–65[1,2]	Press, Release
Pico® 2 Buttons[1,2]	82–86[1,2]	Press, Release
Pico® 3 Buttons[1,2]	103–107[1,2]	Press, Release
Pico® 4 Buttons[1,2]	124–128[1,2]	Press, Release
Pico® 5 Buttons[1,2]	145–149[1,2]	Press, Release
Pico® 6 Buttons[1,2]	166–170[1,2]	Press, Release
Pico® 7 Buttons[1,2]	187–191[1,2]	Press, Release
Pico® 8 Buttons[1,2]	208–212[1,2]	Press, Release
Pico® 9 Buttons[1,2]	229–233[1,2]	Press, Release
Pico® 10 Buttons[1,2]	250–254[1,2]	Press, Release

NOTES

1. All models *except* PJ2-4B: Pico® button order (Top, Favorite, Bottom, Raise, Lower) dictates Component Number (see Pico® 1 example, below):

Pico® 1 Button	Sample Component Number
Top	61
Favorite	62
Bottom	63
Raise	64
Lower	65

2. Model PJ2-4B* *only*: Pico® button order is 1, 2, 3, 4 and component mapping will be as below:

Pico® 1 Button	Sample Component Number
1	61
2	64
3	65
4	63

* Model PJ2-4B is supported only on QSM software version 7.28 and higher.

Continued on next page…

QS Sensor Module *(continued)*
DEVICE Commands *(continued)*

DEVICE Command-specific fields *(continued)*

Action Numbers and **Parameters:**

Action	Action Number	Parameters
(~) Report Occupied/Button Press	3	None
(~) Report Unoccupied/Button Release	4	None

Example DEVICE Commands

Examples presume QSM has been assigned integration ID QSMID.

Operation	Command String
Response: ~DEVICE, Integration ID, Component Number, Action Number	
Wired Occupancy Sensor 1 transitions to Occupied	~DEVICE,QSMID,1,3<CR><LF>
Wired Occupancy Sensor 1 transitions to Unoccupied	~DEVICE,QSMID,1,4<CR><LF>
Wireless Occupancy Sensor 1 transitions to Occupied	~DEVICE,QSMID,5,3<CR><LF>
Wireless Occupancy Sensor 1 transitions to Unoccupied	~DEVICE,QSMID,5,4<CR><LF>
Pico® 1 Favorite button press	~DEVICE,QSMID,62,3<CR><LF>

Worldwide Technical and Sales Assistance

If you have questions concerning the installation or operation of this product, call the Lutron® Technical Support Center.

Please provide the exact model number when calling.
Model number can be found on the product packaging.
Example: SZ-CI-PRG

U.S.A., Canada, and the Caribbean: 1.800.523.9466
Other countries call: +1.610.282.3800
Fax: +1.610.282.1243

Visit us on the web at www.lutron.com

Lutron, Lutron, Clear Connect, EcoSystem, GRAFIK Eye, HomeWorks, Maestro, Pico, Quantum, RadioRA, seeTouch, Sivoia, and Softswitch are registered trademarks and Architrave, Energi Savr Node, GRAFIK, Hyperion, Q-Design, Radio Powr Savr, and Signature Series are trademarks of Lutron Electronics Co., Inc.

IEEE is a registered trademark of the Institute of Electrical and Electronics Engineers, Inc., (IEEE). This publication is not endorsed or approved by the IEEE.

DALI is a registered trademark of ZVEI - Zentralverband Elektrotechnik-und Elektronikindustrie e.V.

This publication is not endorsed or approved by Apple, Inc.

© 2014–2015 Lutron Electronics Co., Inc.

P/N 040249 Rev. Q 04/2015

Lutron Electronics Co., Inc.
7200 Suter Road
Coopersburg, PA 18036 USA